



- 1 Fuel pump
- 2 IN_S
- 3 IN_4
- 4 IN_4
- 5 IN_4
- 6 VVT Solenoid | inj7
- 7 VVT Solenoid | inj7
- 8 X
- 9 X
- 10 X
- 11 X
- 12 X
- 13 X
- 14 X
- 15 X
- 16 X
- 17 X
- 18 X
- 19 X
- 20 X
- 21 X
- 22 X
- 23 X
- 24 X
- 25 X
- 26 X
- 27 X
- 28 X
- 29 X
- 30 X
- 31 X
- 32 X
- 33 X
- 34 X
- 35 X
- 36 X
- 37 X
- 38 X
- 39 X
- 40 X
- 41 X
- 42 X
- 43 X
- 44 X
- 45 X
- 46 X
- 47 X
- 48 X
- 49 X
- 50 X
- 51 X
- 52 X
- 53 X
- 54 X
- 55 X
- 56 X
- 57 X
- 58 X
- 59 X
- 60 X
- 61 X
- 62 X
- 63 X
- 64 X
- 65 X
- 66 X
- 67 X
- 68 X
- 69 X
- 70 X
- 71 X
- 72 X
- 73 X
- 74 X
- 75 X
- 76 X
- 77 X
- 78 X
- 79 X
- 80 X
- 81 X
- 82 X
- 83 X
- 84 X
- 85 X
- 86 X
- 87 X
- 88 X
- 89 X
- 90 X
- 91 X
- 92 X
- 93 X
- 94 X
- 95 X
- 96 X
- 97 X
- 98 X
- 99 X
- 100 X

