

Introduction

The STM32 ST-LINK Utility software facilitates fast in-system programming of the STM32 microcontroller families in development environments via the tools, ST-LINK and ST-LINK/V2.

This User manual describes the software functions of the STM32 ST-LINK Utility. When working with the STM32 ST-LINK Utility, you are encouraged to download the ST-LINK in-circuit debugger/programmer user manual (UM0627) or the ST-LINK/V2 in-circuit debugger/programmer user manual (UM1075) for the STM8 and STM32, which provide more information about the ST-LINK tools.

Note: The part number of STM32 ST-LINK Utility software is STSW-LINK004.

Contents

- 1 Getting started 6**
 - 1.1 System requirements 6
 - 1.2 Hardware requirements 6
 - 1.3 Installing the STM32 ST-LINK Utility 6
 - 1.4 Uninstalling the STM32 ST-LINK Utility 6

- 2 STM32 ST-LINK Utility user interface 8**
 - 2.1 Main window 8
 - 2.2 Menu bar 10
 - 2.2.1 File menu 10
 - 2.2.2 Edit Menu 10
 - 2.2.3 View menu 11
 - 2.2.4 Target menu 11
 - 2.2.5 ST-LINK menu 14
 - 2.2.6 External Loader menu 14
 - 2.2.7 Help menu 16

- 3 STM32 ST-LINK Utility features 17**
 - 3.1 Device information 17
 - 3.2 Memory display and modification 17
 - 3.3 Flash memory erase 19
 - 3.4 Device programming 20
 - 3.5 Option bytes configuration 21
 - 3.6 MCU core functions 25
 - 3.7 Automatic mode functions 26
 - 3.8 Developing custom loaders for external memory 27
 - 3.9 Printf via SWO Viewer 27

- 4 STM32 ST-LINK Utility command line interface (CLI) 29**
 - 4.1 Command line usage 29
 - 4.1.1 Connection and memory manipulation commands 29
 - 4.1.2 Core commands 30
 - 4.1.3 Flash commands 32

4.1.4	Option byte commands	33
4.1.5	External memory command	38
4.1.6	ST-LINK_CLI return codes	39
5	Revision history	40

List of tables

Table 1.	ST-LINK_CLI return codes	39
Table 2.	Document revision history	40

List of figures

Figure 1.	STM32 ST-LINK Utility user interface main window	8
Figure 2.	File menu	10
Figure 3.	Edit menu	10
Figure 4.	View menu	11
Figure 5.	Target menu	11
Figure 6.	ST-LINK menu	14
Figure 7.	External Loader menu	14
Figure 8.	External Loader window	14
Figure 9.	External Loader submenus.	15
Figure 10.	External memory grid	15
Figure 11.	Help menu	16
Figure 12.	Device information zone in the main user interface	17
Figure 13.	STM32 ST-LINK Utility user interface	18
Figure 14.	Flash Memory Mapping dialog box	19
Figure 15.	Open file dialog box	20
Figure 16.	Device programming dialog box (programming).	21
Figure 17.	Option Bytes dialog box	24
Figure 18.	MCU Core panel dialog box	25
Figure 19.	Automatic mode	26
Figure 20.	Serial Wire Viewer window (SWV)	27

1 Getting started

This section describes the requirements and procedures to install the STM32 Root part number 1 Utility software.

1.1 System requirements

The STM32 Root part number 1 Utility PC configuration requires as a minimum:

- PC with USB port and Intel[®] Pentium[®] processor running a 32-bit version of one of the following Microsoft[®] operating systems:
 - Windows[®] XP
 - Windows 7
- 256 Mbytes of RAM
- 30 Mbytes of hard disk space available

1.2 Hardware requirements

The STM32 ST-LINK Utility is designed to work with:

- STM32 F0, STM32 F1, STM32 F2, STM32 F3, STM32 F4, STM32 L1, STM32 L0 and STM32W series
- ST-LINK or ST-LINK/V2 or ST-LINK/V2-ISOL in-circuit debugger/programmer probe

Note: In this document, *ST-LINK/V2* refer to *ST-LINK/V2* and *ST-LINK/V2-ISOL* which are functionally equivalent.

1.3 Installing the STM32 ST-LINK Utility

Follow these steps and the on-screen instructions to install the STM32 ST-LINK Utility.

1. Download the compressed STM32 ST-LINK Utility software from the ST website.
2. Extract the contents of the *.zip* file into a temporary directory.
3. Double-click the extracted executable, *setup.exe*, to initiate the installation, and follow the on-screen prompts to install the STM32 ST-LINK Utility in the development environment. Documentation for the Utility is located in the subdirectory *\Docs* where the STM32 ST-LINK Utility is installed.

Note: If an earlier version of STM32 ST-LINK Utility software is already installed on your computer please follow the uninstalling instructions described in section 1.4 before installing the new version.

1.4 Uninstalling the STM32 ST-LINK Utility


Follow these steps to uninstall the STM32 ST-LINK Utility.

1. Select **Start | Settings | Control Panel**.
2. Double-click on **Add or Remove Programs**.
3. Select **STM32 ST-LINK Utility**.
4. Click on the **Remove** button.

2 STM32 ST-LINK Utility user interface

2.1 Main window

Figure 1. STM32 ST-LINK Utility user interface main window

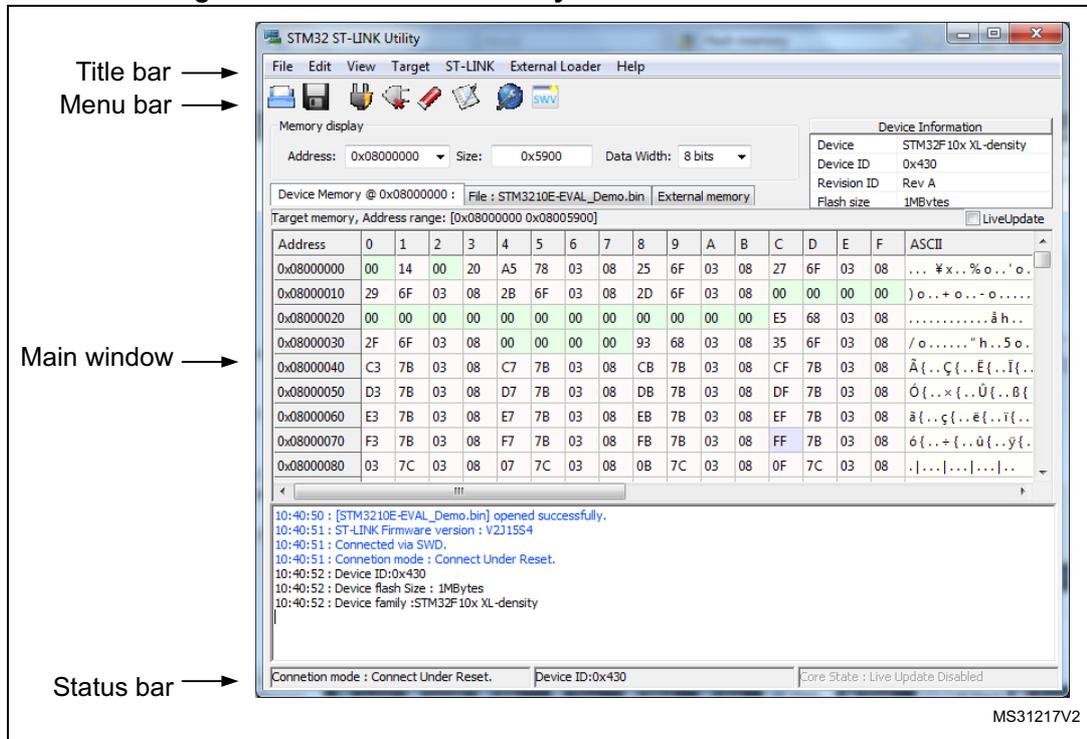

MS31217V2

The main window is composed of three zones and three bars as illustrated in [Figure 1](#):

- Memory display zone
- Device information zone
- Memory contents zone
 - **LiveUpdate** checkbox to update Memory data in real time
(This feature is described in more detail in [Section 3.2](#))
- Title bar: name of the current menu
- Menu bar: Use the menu bar to access the following STM32 ST-LINK Utility functions:
 - **File** menu
 - **Edit** menu
 - **View** menu
 - **Target** menu
 - **Help** menu

These menus are described in more detail in [Section 2.2](#).
- Status window: The status bar displays:
 - Connection status and debug interface
 - Device ID
 - Core State (active only when LiveUpdate feature is active and memory grid is selected)


The STM32 ST-LINK Utility user interface also provides additional forms and descriptive pop-up error messages.

2.2 Menu bar

The Menu bar allows users to execute the STM32 ST-LINK Utility software features.

2.2.1 File menu


Figure 2. File menu

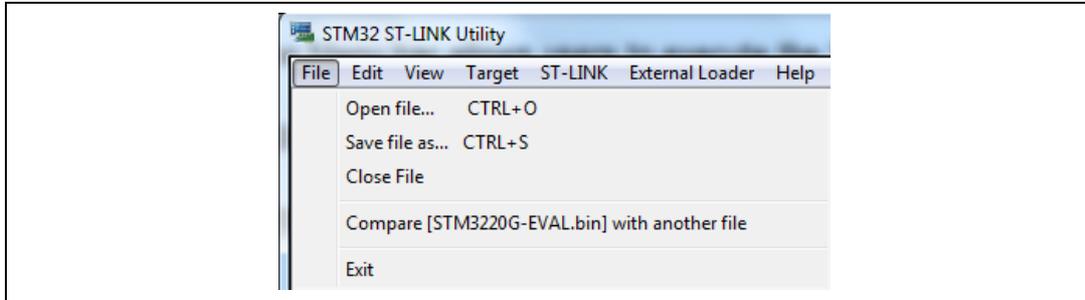

- Open file...** Opens a binary, Intel Hex or Motorola S-record.
- Save file as...** Saves the content of the memory panel into a binary, Intel Hex or Motorola S-record.
- Close File** Closes the loaded file.
- Compare two files** Compares two binary, hex, or srec files. The difference is colored in red in the file panel. If a file contains a section with an address range that is unavailable in the other file, this section will be colored in violet.
- Exit** Closes the STM32 ST-LINK Utility program.

2.2.2 Edit Menu

Figure 3. Edit menu

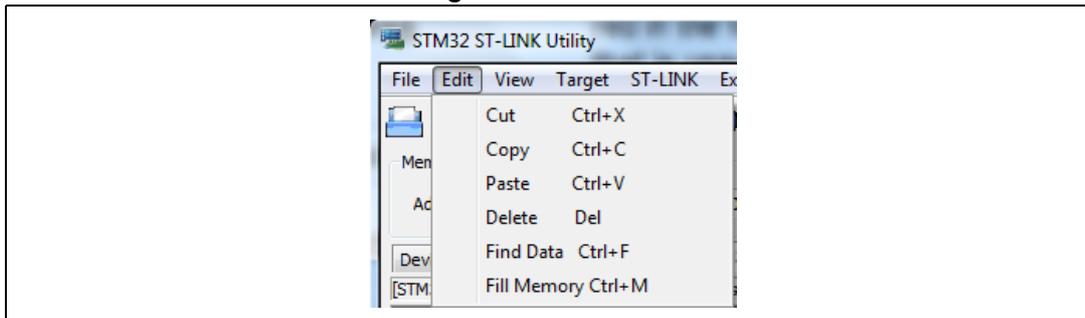


- Cut** Cut the selected cells on file or memory grid.
- Copy** Copy selected cells on file or memory grid.
- Paste** Paste the copied cells in the selected position in file or memory grid.
- Delete** Delete the selected cells on file or memory grid.

- Find Data** Find data in binary or Hex format in file or memory grid.
- Fill Memory** Fill file or memory grid with the chosen data starting from the chosen address.

2.2.3 View menu


Figure 4. View menu

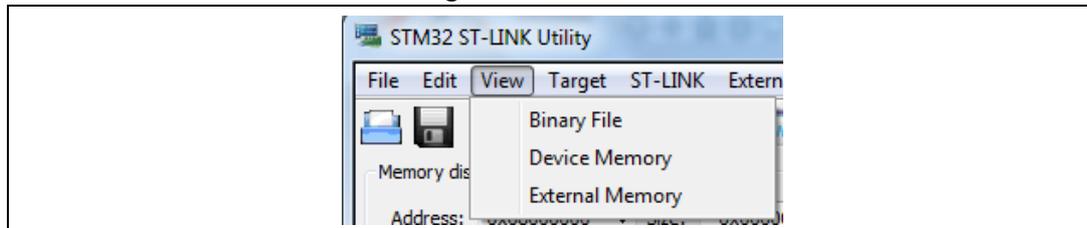

- Binary file** Displays the content of the loaded binary file.
- Device memory** Displays the content of the device memory.
- External memory** Displays the content of the external memory.

2.2.4 Target menu

Figure 5. Target menu

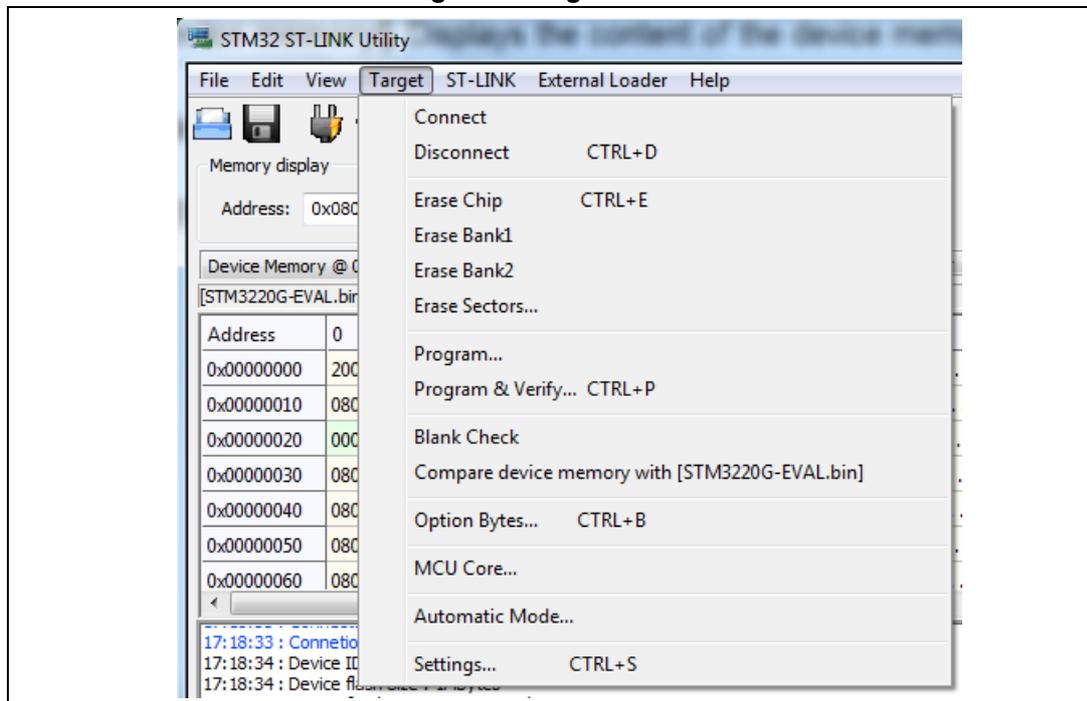

Connect	Connects to the target device and displays the Device Type, Device ID and Flash memory size in the device information zone.
Disconnect	Disconnects from the target device.
Erase Chip	Performs a Flash memory mass erase and then displays the Flash memory content in the memory panel.
Erase Bank1	Erases bank 1 of the Flash memory. This menu is enabled only when connected to an XL-density device.
Erase Bank2	Erases bank 2 of the Flash memory. This menu is enabled only when connected to an XL-density device.
Erase Sectors...	Selects sector(s) to erase using the erase sectors dialog window (see Section 3.3: Flash memory erase for more details).
Program...	Loads a binary, Intel Hex or Motorola S-record file into the device memory (Flash or RAM). To do this, select a binary, Intel Hex or Motorola S-record file, enter the start address (where to put the file in the device) in the program dialog window and then click on program button (see Section 3.4: Device programming).
Program & Verify...	Loads a binary, Intel Hex or Motorola S-record file into the device memory (Flash or RAM) then performs a verification of the programmed data.
Blank Check	Verifies that the STM32 Flash memory is blank. If the Flash memory is not blank, the first address with data is highlighted in a prompt message.
Compare device memory with file	Compares the MCU device memory content with a binary, hex, or srec file. The difference is colored in red in the file panel.
Option Bytes...	Opens the Option Bytes dialog window (See Section 3.5: Option bytes configuration for more details).
MCU Core...	Opens the MCU Core dialog window (See Section 3.6: MCU core functions for more details).

Automatic Mode...	<p>Opens the Automatic mode dialog window (See Section 3.7: Automatic mode functions for more details).</p> <p>The Settings dialog box allows to select one ST-LINK probes and defines its connection settings.</p> <p>The ST-LINK probes List contains the serial numbers of all probes connected to the computer.</p> <p>If during the Settings dialog box is shown and some probes are added or removed the "Refresh" button allows the update of the ST-LINK probes List.</p> <p>When you select one probe, you can read the Firmware version and the connected target (depending on the connection settings). After that you can choose the debug interface (JTAG or SWD).</p> <p>Also the reset type can be selected:</p> <p>* The "connect under reset" option allows you to connect to the target before executing any instruction. This is useful in many cases like when the target contains a code that disables the JTAG/SWD pins.</p>
Settings...	<p>*The "HotPlug" option allows you to connect to the target without halt or reset. This is useful to update RAM addresses or IP registers while application is running.</p> <p>When connecting to the target via an ST-LINK/V2, the "Supply voltage" combo box displays the target voltage.</p> <p>When connecting to an STM32 F2 or STM32 F4 device using an ST-LINK, the "Supply voltage" combo allows you to select the supply voltage of your target to be able to correctly program the Flash memory.</p> <p>The "Enable debug in Low power mode" option allows you to connect to a device in low-power mode.</p> <p>If any connection settings changes, the dialog tries to identify the target with the new connection settings.</p>

Note: *The "connect under reset" option is available only with ST-LINK/V2 and in SWD mode. For JTAG mode, "connect under reset" is available since ST-LINK/V2 firmware Version V2J15Sx.*

The RESET pin of the JTAG connector (pin 15) should be connected to the device reset pin.

The "HotPlug" option is available in SWD mode.

The Low Power mode will be disabled when the user disconnect from the target.

For JTAG mode, "HotPlug" has been available since ST-LINK firmware Version V2J15Sx.


The ST-LINK firmware Version for using in case of multi probes selection, should be:

- *V1J13S0 or greater for ST-LINK.*
- *V2J21S4 or greater for ST-LINK/V2.*
- *V2J21M5 or greater for ST-LINK/V2-1.*

When an ST-LINK/v2 or ST-LINK/V2-1 probe is used with another application, the serial number will not be displayed and the probe can't be used in the current instance of ST-LINK Utility.

2.2.5 ST-LINK menu


Figure 6. ST-LINK menu

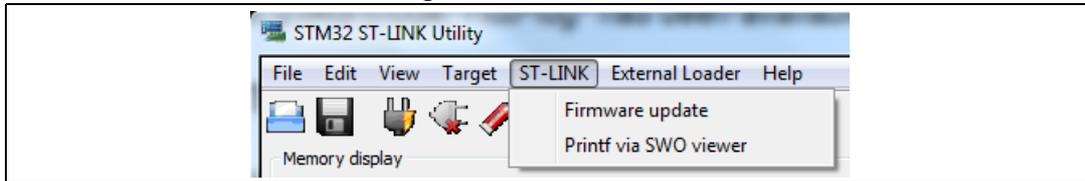

- Firmware update** Displays the version of ST-LINK and ST-LINK/V2 firmware and updates it to the last version:
 ST-LINK: V1J13S0
 ST-LINK/V2: V2J21S4
 ST-Link/V2-1: V2J21M5
- Printf via SWO viewer** Displays printf data sent from target via SWO (see [Section 3.9: Printf via SWO Viewer](#) for more details).

2.2.6 External Loader menu


Figure 7. External Loader menu

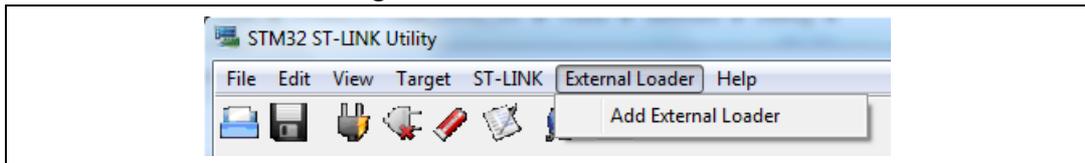

The STM32 ST-LINK Utility includes the **Add External Loader** submenu which allows to select the external loaders to be used by the ST-LINK Utility to read, program or erase external memories.


The external loaders must be added in the *ExternalLoader* directory located under the *ST-LINK Utility* directory (see [Section 3.8: Developing custom loaders for external memory](#) for more details on how to create a custom loader).

Figure 8. External Loader window

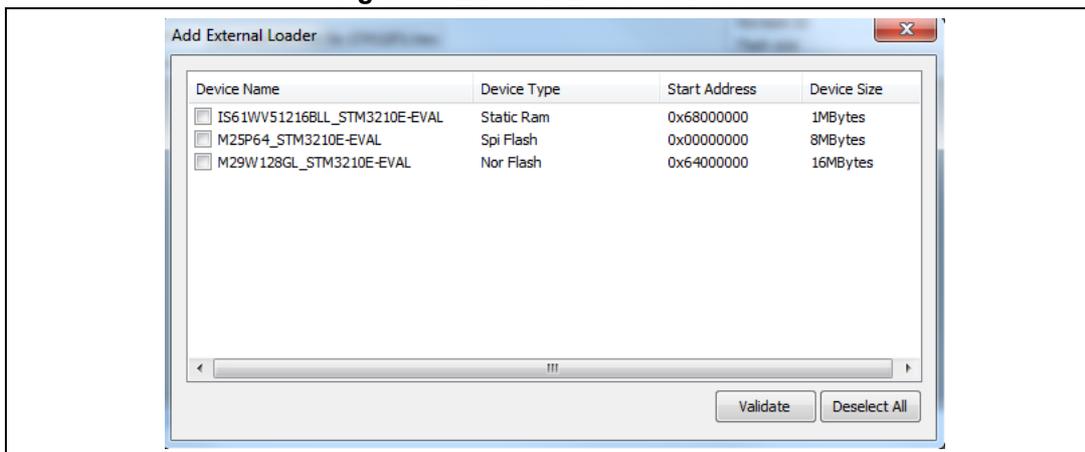

When the external loaders have been selected in the **External Loader** dialog box (see [Figure 8: External Loader window](#)), new submenus are displayed, one per each external loader selected. They offer all the functions (Program, Sector Erase...) available in the corresponding external loader (see [Figure 9: External Loader submenus](#)).


Figure 9. External Loader submenus

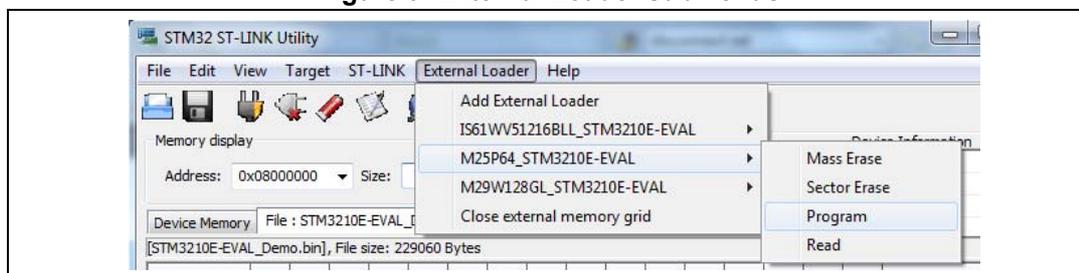

The contents of the external memory is displayed in the **External Memory** grid (see [Figure 10: External memory grid](#)).

Selecting the **Close external memory grid** submenu shuts down the **External Memory grid** window.


Figure 10. External memory grid

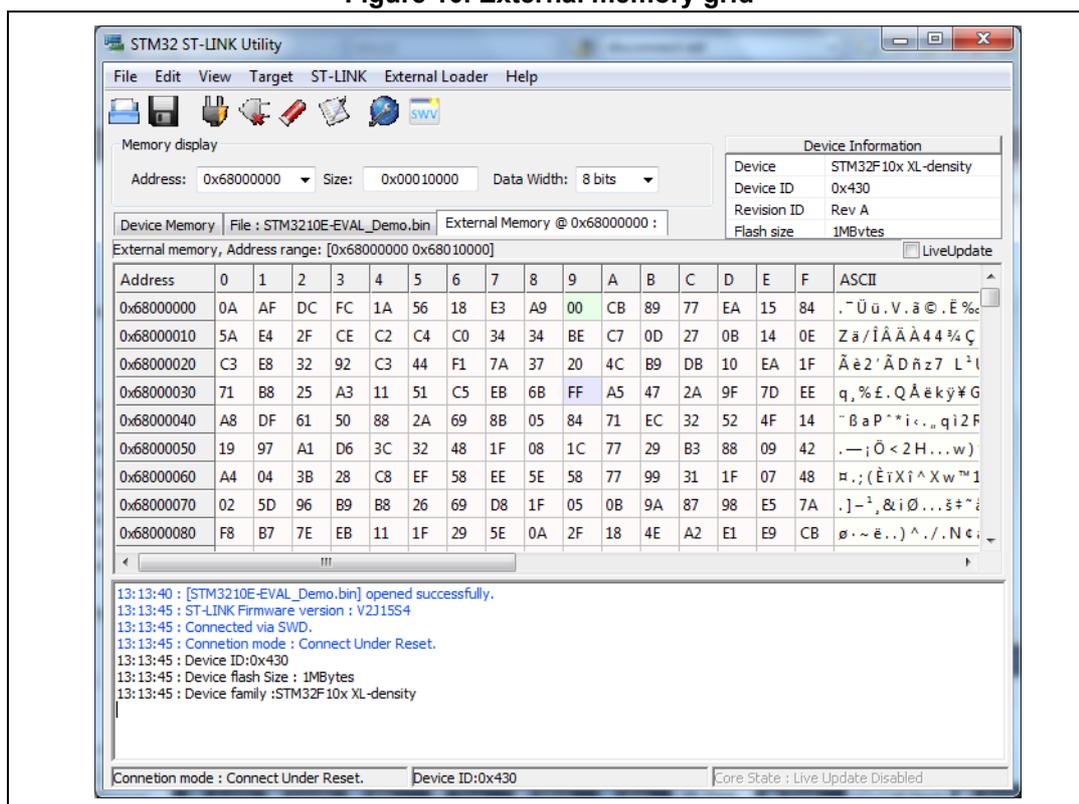

Note: Only 10 external loaders can be selected at the same time.
 The external memories connected to the STM32 MCU via FSMC can be accessed automatically through the **Device Memory Grid** if the corresponding external loader has already been added by using the **Add External Loader** submenu.

2.2.7 Help menu

Figure 11. Help menu

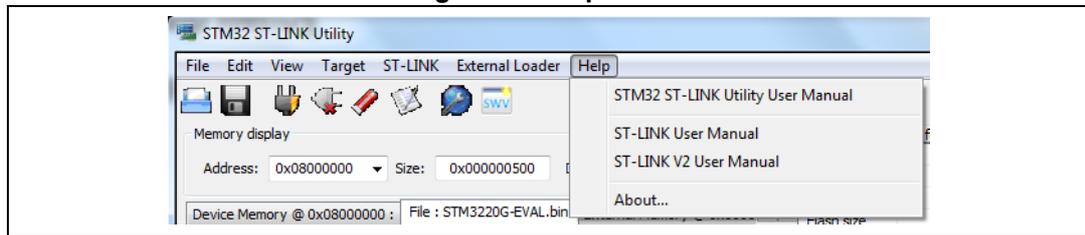

STM32 ST-LINK Utility User Manual	Opens the STM32 ST-LINK Utility User Manual.
ST-LINK User Manual	Opens the ST-LINK User Manual.
ST-LINK/V2 User Manual	Opens the ST-LINK/V2 User Manual.
About...	Displays STM32 ST-LINK Utility software version and copyright information.

3 STM32 ST-LINK Utility features

This section provides a detailed description of how to use STM32 ST-LINK Utility features:

- [Device information](#)
- [Memory display and modification](#)
- [Flash memory erase](#)
- [Device programming](#)
- [Option bytes configuration](#)
- [MCU core functions](#)
- [Automatic mode functions.](#)

3.1 Device information

The *Device information* zone displays information as shown in [Figure 12](#).

Figure 12. Device information zone in the main user interface

Device Information	
Device	STM32F10xxx High-density device
Device ID	0x414
Revision ID	Rev Z
Flash size	512 Kbyte

Device:	Family of the connected STM32 device. Each device type includes many devices with different characteristics such as Flash memory size, RAM size and peripherals.
Device ID:	MCU device ID code located in the external PPB memory map
Revision ID:	The revision ID of the connected MCU device
Flash size:	Size of the on-chip Flash memory

3.2 Memory display and modification

In addition to the **Device information** zone, the main window contains 2 other zones:

- Memory display
- Memory data


Memory display: This zone contains three edit boxes:

Address:	Memory start address from which you want to read.
Size:	Amount of data to read.
Data width:	Width of the displayed data (8-bit, 16-bit or 32-bit).

Memory data: This zone displays the data read from a file or the memory content of a connected device. You can modify the content of the file before downloading.

- To use this zone to display the content of a binary, Intel Hex or Motorola S-record file, go to **File | Open file...**
- To use this zone to read and display memory content of a connected device, enter the memory start *Address*, data *Size* and the *Data Width* in the *Memory display* zone and then press **Enter**.
- After reading data, you can also modify each value merely by double-clicking on the concerned cell as illustrated by *Figure 13*. You can also save the device memory content into a binary, Intel Hex or Motorola S-record file using the menu **File | Save file as...**
- When LiveUpdate feature is used the device memory grid will be updated in real time and the data that have been modified will be colored in red.

Figure 13. STM32 ST-LINK Utility user interface

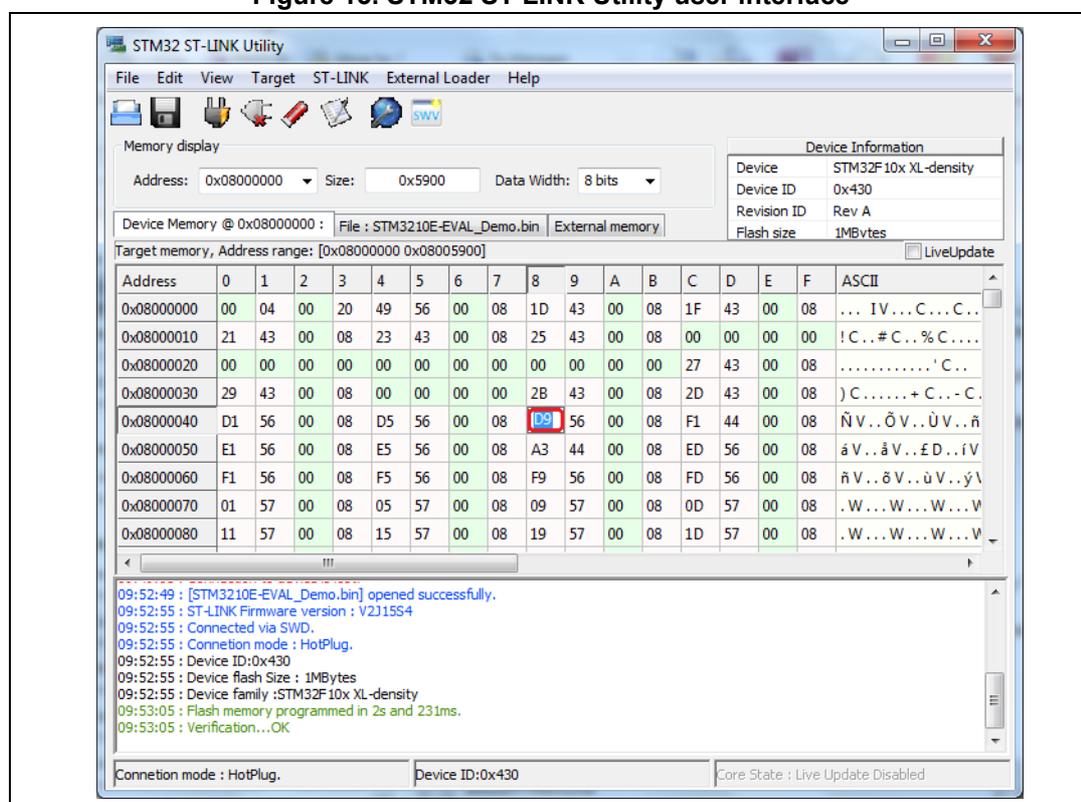

Note: When the Memory data zone displays device memory contents, any modification is automatically applied to the chip. You can modify user Flash memory, RAM memory and peripherals registers.


For the STM32 F2 and STM32 F4 devices, you can modify the OTP area directly from the memory data zone.

3.3 Flash memory erase

There are two types of Flash memory erase:

- **Flash mass erase:** Erase all the memory Flash memory sectors of the connected device. This is done by clicking on the menu **Target | Erase Chip**.
- **Flash Sector Erase:** Erase the selected sector(s) of the Flash memory. To select sector(s), go to **Target | Erase Sectors...** which then displays the **Flash Memory Mapping** dialog box where you select the sector(s) to erase as shown in [Figure 14](#).
 - **Select all** button selects all the Flash memory pages.
 - **Deselect all** button deselects all selected page.
 - **Cancel** button discards the erase operation even if some pages are selected.
 - **Apply** button erases all the selected pages.

Figure 14. Flash Memory Mapping dialog box

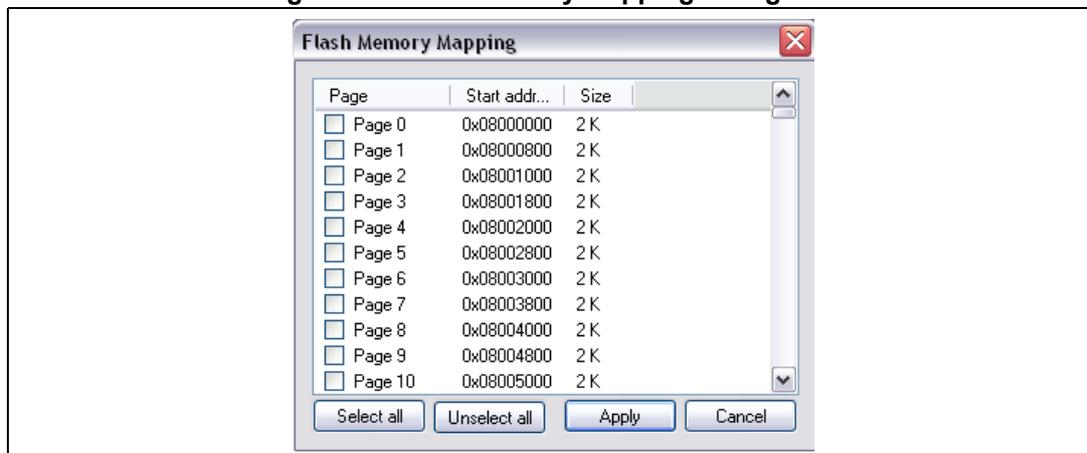


Note: To erase the Flash data memory sector of the ultralow power STM32 L1 devices, select the data memory box at the end of the list and click **Apply**.

3.4 Device programming

The STM32 ST-LINK Utility can download binary, Hex, or srec files into Flash or RAM memory. To do this, follow these steps:


1. Click on **Target | Program...** (or **Target | Program & Verify...** if you want to verify the written data) to open the **Open** file dialog box as shown in [Figure 15](#).
If a binary file is already opened, go to step 3.

Figure 15. Open file dialog box

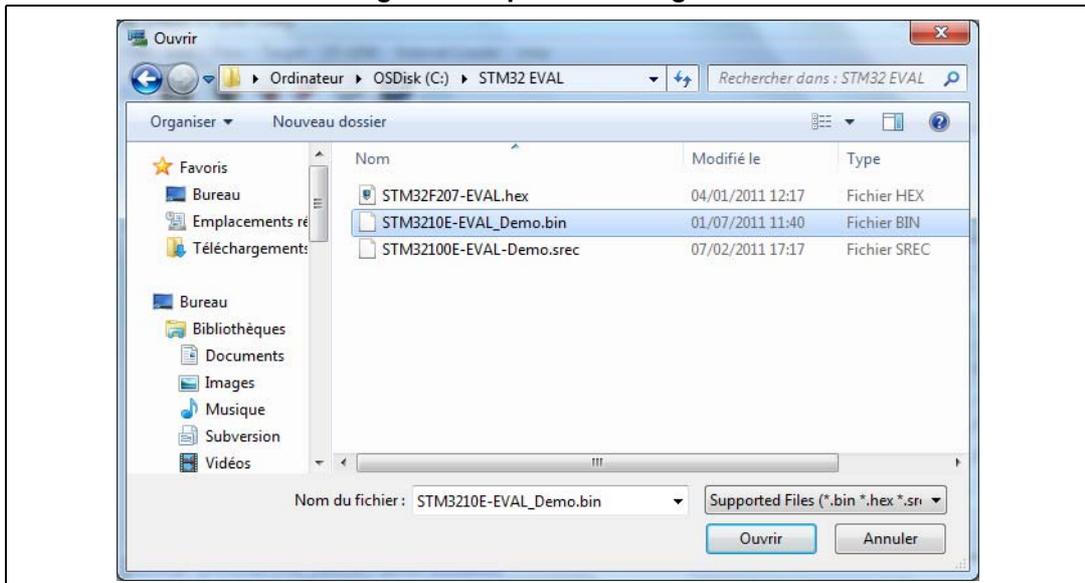

2. Select a binary, Intel Hex or Motorola S-record file and click on the **Open** button.
3. Specify the address from which to start programming as shown in [Figure 16](#), it may be a Flash or RAM address.

Figure 16. Device programming dialog box (programming)

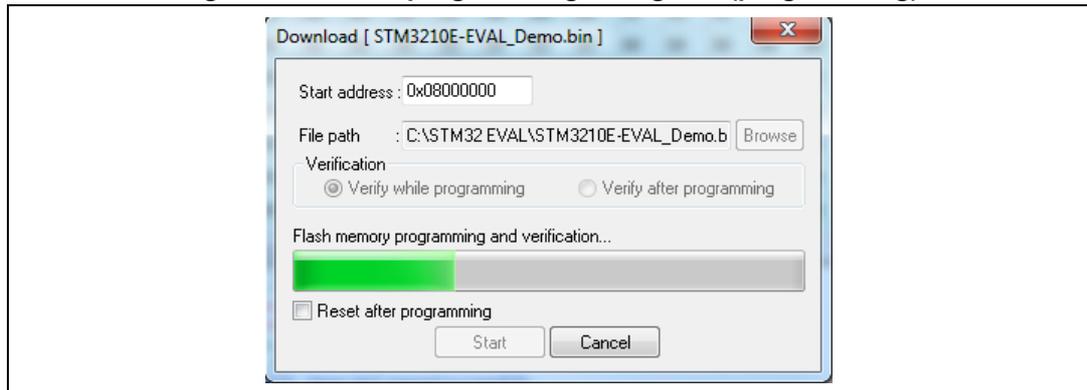

4. Choose a verification method by selecting one of the two radio buttons:
 - a) Verify while programming: fast on-chip verification method which compares the program buffer content (portion of file) with the Flash memory content.
 - b) Verify after programming: slow but reliable verification method which reads all the programmed memory zone after the program operation ends and compares it with the file content.
5. At last, click on the Start button to start programming. If you selected **Target | Program & Verify...** in the first step, a check is done during the programming operation. If the “Reset after programming” box is checked, an MCU reset will be issued.

Note: The STM32 F2 and STM32 F4 series supports different programming modes depending on the MCU supply voltage. When using ST-LINK, the MCU supply voltage should be specified in the **Target | Settings** Menu to be able to program the device with the correct mode. When using ST-LINK/V2, the supply voltage is detected automatically.

If the device is read-protected, the protection will be disabled. If some Flash memory pages are write-protected, the protection will be disabled during programming and then recovered.

3.5 Option bytes configuration

The STM32 ST-LINK Utility can configure all the option bytes via the **Option Bytes** dialog box (shown in [Figure 17](#)) which is accessed by **Target | Option Bytes....**

The **Option Bytes** dialog box contains the following sections:

- **Read Out Protection**

Modifies the read protection state of the Flash memory.

For STM32 F0, STM32 F2, STM32 F3, STM32 F4 and STM32 L1 devices, read protection levels are available:

- Level 0: no read protection
- Level 1: memory read protection enabled
- Level 2: memory read protection enabled and all debug features disabled.

For the other devices, the read protection can only be enabled or disabled.

- **BOR Level**

Brownout reset level. This list contains the supply level threshold that activates/releases the brownout reset. This option is enabled only when connected to the STM32 L1, STM32 F2 and STM32 F4 devices.

For ultra-low-power devices, 5 programmable VBOR thresholds can be selected:

- BOR LEVEL 1: Reset threshold level for 1.69 to 1.8 V voltage range
- BOR LEVEL 2: Reset threshold level for 1.94 to 2.1 V voltage range
- BOR LEVEL 3: Reset threshold level for 2.3 to 2.49 V voltage range
- BOR LEVEL 4: Reset threshold level for 2.54 to 2.74 V voltage range
- BOR LEVEL 5: Reset threshold level for 2.77 to 3.0 V voltage range

For STM32 F2 and STM32 F4 devices, 4 programmable VBOR thresholds can be selected:

- BOR LEVEL 3: Supply voltage ranges from 2.70 to 3.60 V
- BOR LEVEL 2: Supply voltage ranges from 2.40 to 2.70 V
- BOR LEVEL 1: Supply voltage ranges from 2.10 to 2.40 V
- BOR off: Supply voltage ranges from 1.62 to 2.10 V

- **User Configuration option bytes**

- WDG_SW: If checked, the watchdog is enabled by software. Otherwise, it is automatically enabled at power-on.
- IWDG_STOP: If not checked, the independent watchdog counter is frozen in STOP mode. If checked, this counter is active in STOP mode.
- IWDG_STBY: If not checked, the independent watchdog counter is frozen in Standby mode. If checked this counter is active in Standby mode.
- WWDG_SW: If checked, the window watchdog is enabled by hard option bit.
- SRAM2_RST^(a): This bit allows the user to enable the SRAM2 erase on system reset. If checked SRAM2 is not erased when a system reset occurs. If not checked, SRAM2 is erased when system reset occurs.
- SRAM_PE^(a): This bit allows the user to enable the SRAM2 hardware parity check. If checked, SRAM2 parity check is disabled.
- DUALBANK^(b): If checked, 512/256K Dual Bank Flash with contiguous addresses.
- DB1M^(c): Dual Bank on 1 MByte Flash.
- PCROP_RDP^(a): If checked, PCROP area is erased when the RDP level is decreased from Level 1 to Level 0 (full mass erase).
- nRST_SHDW^(a): If checked, no reset is generated. If not checked, reset is generated when entering the Shutdown mode.
- nRST_STOP: If not checked, a reset is generated when entering Standby mode (1.8 V domain powered-off). If checked, no reset is generated when entering Standby mode.
- nRST_STDBY: If not checked, reset is generated when entering Stop mode (all

a. Only available on STM32 L4 devices.

b. Only available on STM32 L4 devices supporting Dual Bank mode.

c. Only available on STM32F42x/STM32F43x 1 MByte devices.

- clocks are stopped). If checked, no reset is generated when entering Stop mode.
- nBFB2: If not checked, and if the boot pins are set to make the device boot from the user Flash at startup, the device boots from Flash memory bank 2; otherwise, it boots from Flash memory bank 1. This option is enabled only when connected to a device containing two Flash banks.
 - nBoot1^(d): Together with the BOOT0 pin, selects the Boot mode:
 - nBoot1 checked/unchecked and BOOT0 = 0 => Boot from Main Flash memory;
 - nBoot1 checked and BOOT0 = 1 => Boot from System memory;
 - nBoot1 unchecked and BOOT0 = 1 => Boot from Embedded SRAM.
 - VDDA_Monitor^(d): Selects the analog monitoring on VDDA Power source:

If checked, VDDA power supply supervisor is enabled; otherwise, it is disabled.
 - nSRAM_Parity^(d): This bit allows the user to enable the SRAM hardware parity check.

If checked, SRAM parity check is disabled; otherwise it is enabled.
 - SDADC12_VDD_Monitor^(e):

If checked, SDADC12_VDD power supply supervisor is enabled; otherwise it is disabled.
 - nBoot0_SW_Cfg^(f): This bit allows user to completely disable BOOT0 hardware pin and use User Option bit 11 (nBoot0).

If checked, the BOOT0 pin is bonded to GPIO pin (PB8 on LQFP32 and smaller packages, PF11 for QFN32 and bigger packages).
- **Boot address option bytes**

For devices supporting BOOT_ADDx, it allows the boot from base address defined by option bytes BOOT_ADDx.
 BOOT_ADDx[15:0] corresponds to address [29:11].
 For devices supporting both BOOT_ADD0 and BOOT_ADD1, it depends upon BOOT0 pin:

 - If BOOT0 = 0 boot from base address defined by option bytes BOOT_ADD0.
 - If BOOT0 = 1 boot from base address defined by option bytes BOOT_ADD1.


User can enter either the address of the boot, or the BOOT_ADDx option bytes values.
 - **User data storage option bytes:** Contains two bytes for user storage. These two option bytes are not available in the STM32 F0, STM32 F2, STM32 F3, STM32 F4 and STM32 L1 devices.
 - **Flash Sectors Protection:** Depending on the connected device, Flash sectors are grouped by a defined number of pages. You can modify the write protection of each Flash sector here.
 - For devices supporting PCROP feature, it is possible to enable/disable the Read protection of each sector. The “Flash protection mode” allows you to choose between read or write protection.

d. Only available on STM32 F0 and STM32 F3 devices.

e. Only available on STM32F37x devices.

f. Only available on STM32F04x devices.

Figure 17. Option Bytes dialog box

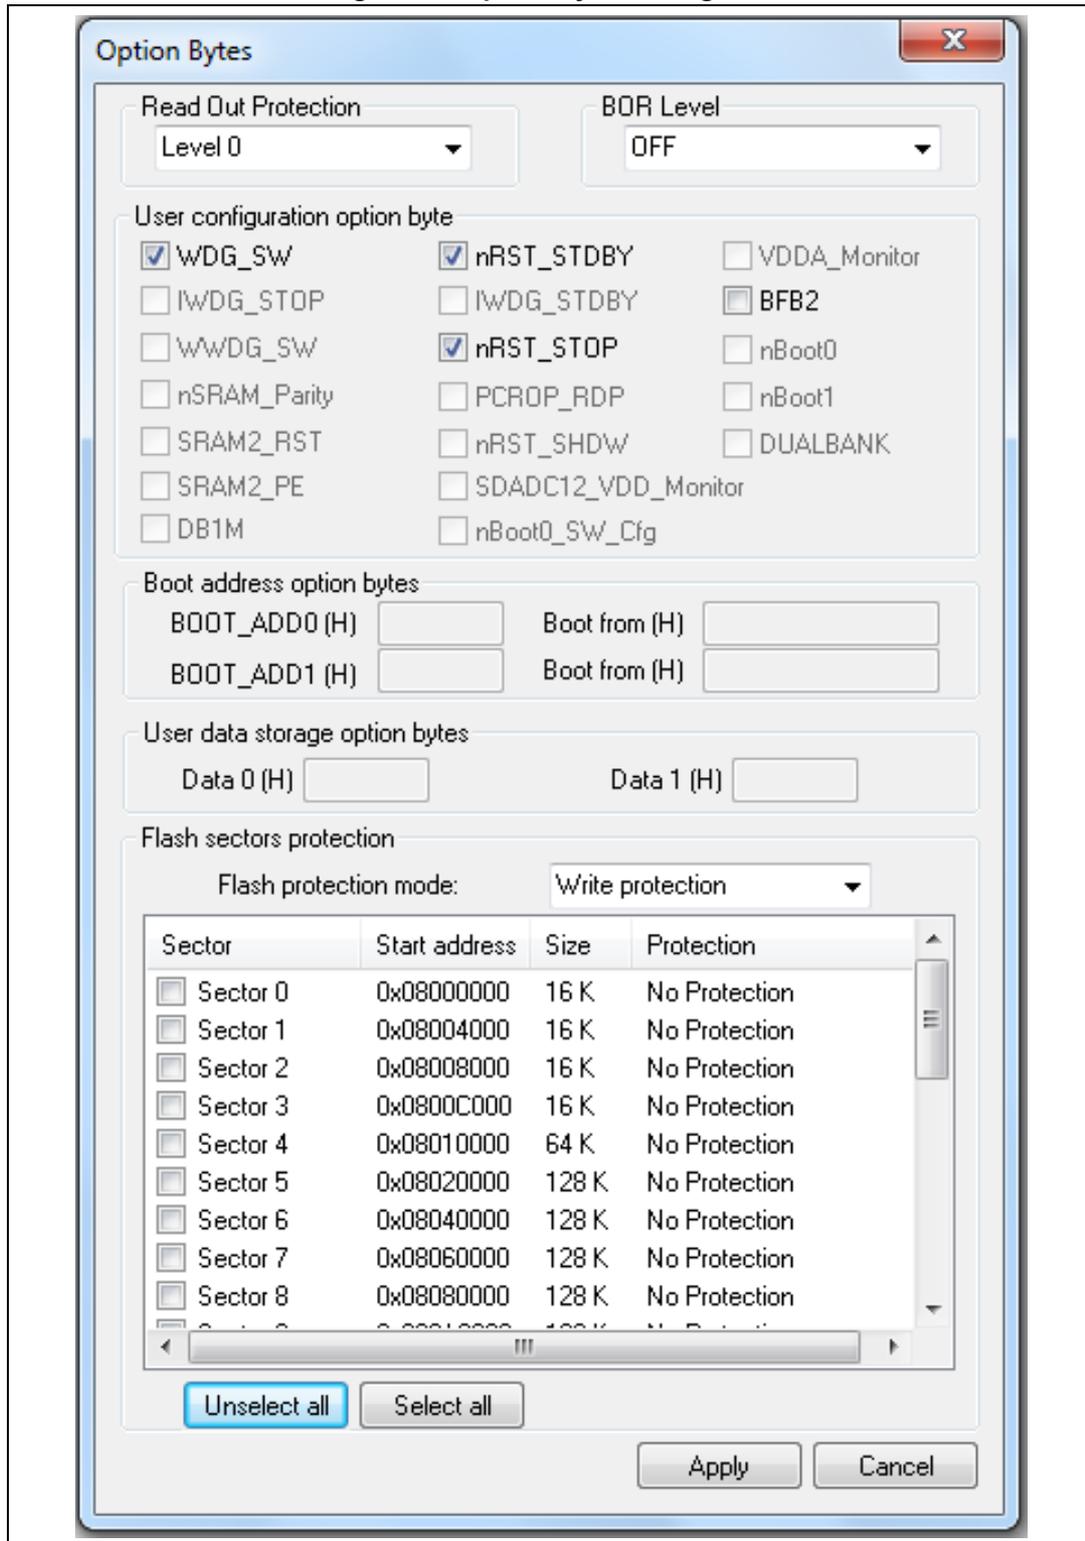


For more details, please refer to the Option Bytes section in the Flash programming manual and reference manual available from www.st.com.

3.6 MCU core functions

The **Core panel** dialog box shown in [Figure 18](#), displays the Cortex[®]-M3 core register values. It also allows you to carry out the following actions on the MCU, using the buttons on the right:

- **Run:** Run the core.
- **Halt:** Halt the core.
- **System Reset:** Send a system reset request.
- **Core Reset:** Reset the core.
- **Step:** Execute only one step core instruction.
- **Read Core Reg:** Update the core registers values.

Figure 18. MCU Core panel dialog box

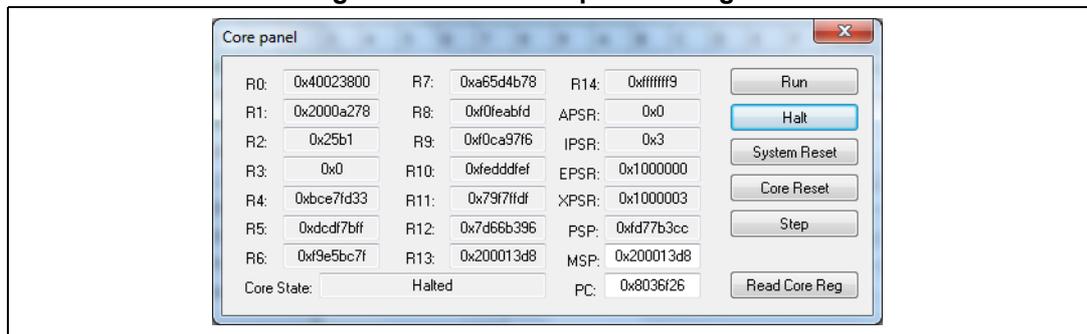

Note: The PC and MSP registers can be modified from this panel.


3.7 Automatic mode functions

The **Automatic Mode** dialog box shown in [Figure 19](#) allows programming and configuring STM32 devices in loop. It allows you to carry out the following actions on the STM32 device:

- Full chip erase
- Flash programming
- Verify
 - Verify while programming
 - Verify after programming
- Option bytes configuration
- Run application

Clicking on the Start button will execute the selected actions on the connected STM32 device and will wait to repeat the same actions after disconnecting the current device and connecting the new device.

Figure 19. Automatic mode

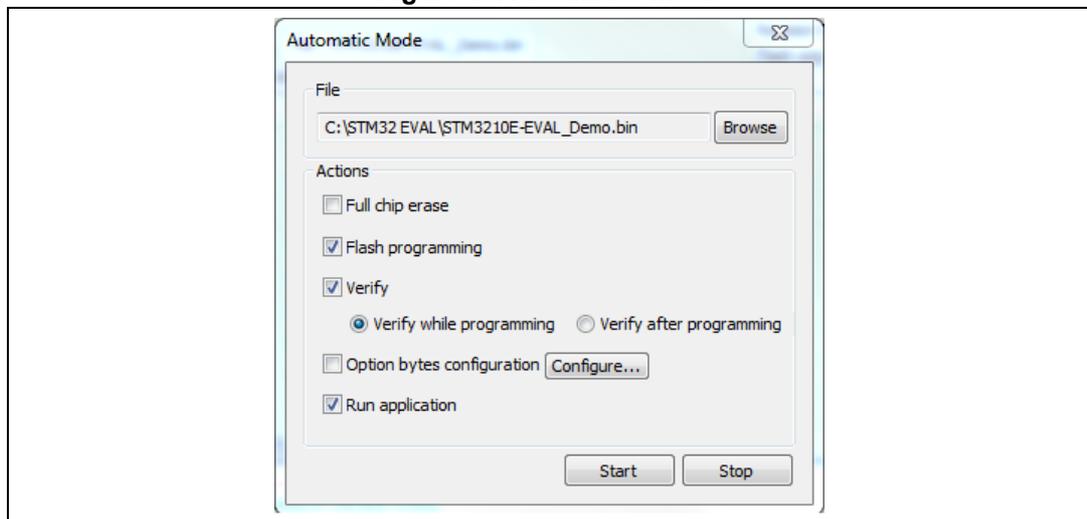

Note: If the user deselects Flash programming action while the STM32 Flash memory is readout protected, it will be automatically unprotected.

If the user deselects Flash programming action while some or all STM32 Flash memory are write-protected, they will be automatically unprotected and restored after programming operation.

Connection to the device should be established to be able to select the option Bytes configuration using the configure button.

The connected devices should be derivatives of the same STM32 family and will be all connected in the same mode (JTAG or SWD).

The Automatic mode can't be used if more than one ST-LINK probe is connected to the computer. A Dialog will be displayed to prevent the user and asks him to keep only one ST-LINK probe connected to continue using this mode.

3.8 Developing custom loaders for external memory

The users can develop their own custom loaders for a given external memory using examples available under the *ExternalLoader* directory.

These examples are available for three toolchains, i.e. MDK-ARM™, EWARM and TrueSTUDIO®. The development of the custom loaders can be performed using one of the three toolchains keeping the same compiler/linker configurations as the examples.

To create a new external memory loader, follow the steps below:

1. Update the device information in *StorageInfo* structure in the *Dev_Inf.c* file with the correct information concerning the external memory.
2. Rewrite the corresponding functions code in the *Loader_Src.c* file.
3. Change the output file name.

Note: Some functions are mandatory and cannot be omitted (see functions description in the *Loader_Src.c* file).

Linker or scatter files should not be modified.

The Loader_Src.c functions must always return '1' when the operation succeeded or '0' if it failed.


After building the external loader project, the output file extension must be changed to '.sldr' and the file must be copied under ExternalLoader directory.

3.9 Printf via SWO Viewer

The Printf via SWO Viewer displays the printf data sent from the target through SWO. It allows to display some useful information on the running firmware.

Before starting receiving SWO data, the user has to specify the exact target system clock frequency to allow the tool to correctly configure the ST-LINK and the target for the correct SWO frequency. The Stimulus port combo box allows the user to choose either a given ITM Stimulus port (from port 0 to 31) or to receive data from all ITM Stimulus ports simultaneously.

Figure 20. Serial Wire Viewer window (SWV)

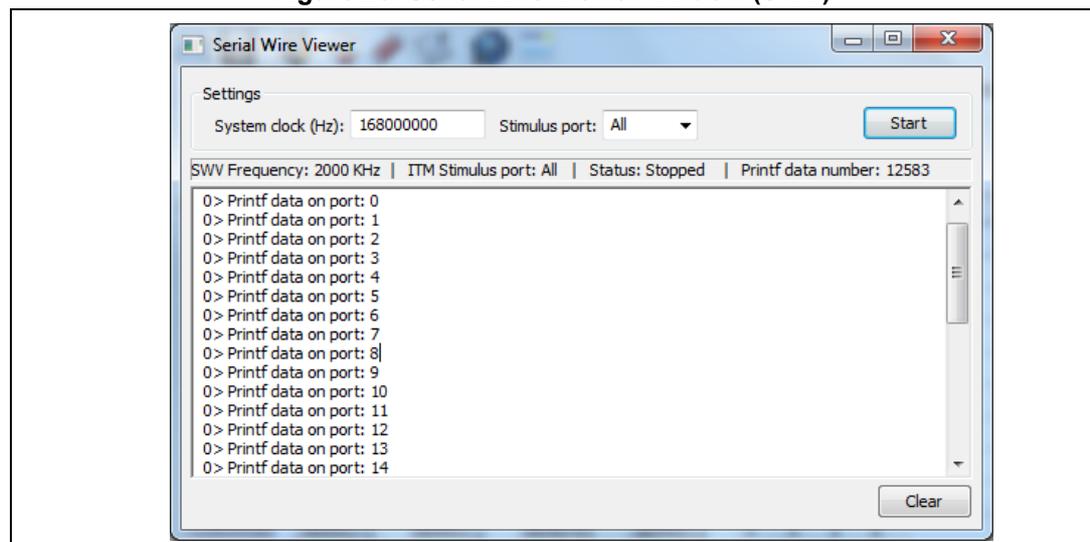

The SWV information bar displays useful information on the current SWV transfer such as the SWO frequency (deduced from the system clock frequency), and the received (expressed in bytes).

Note: Some SWV bytes could be lost during transfer due to ST-LINK hardware buffer size limitation.

4 STM32 ST-LINK Utility command line interface (CLI)

4.1 Command line usage

The following sections describe how to use the STM32 ST-LINK Utility from the command line.

The ST-LINK Utility command line interface is located at the following address:

[Install_Directory]\STM32 ST-LINK Utility\ST-LINK Utility\ST-LINK_CLI.exe

4.1.1 Connection and memory manipulation commands

-c

Description: Select JTAG or SWD communication protocol. By default, JTAG protocol is used.

Syntax: `-c [ID=<id>/SN=<sn>] [JTAG/SWD] [UR/HOTPLUG] [LPM]`

[ID=<id>] : ID of ST-LINK[0..9] to use when multiple probes are connected to the host

[SN=<sn>] : Serial Number of the chosen ST-LINK probe.

[UR] : Connect to target under reset.

[HOTPLUG] : Connect to target without halt or reset.

[LPM] : Activate debug in Low Power mode

Example1: `-c ID=1 SWD UR LPM`

Example2: `-c SN=55FF6C064882485358622187 SWD UR LPM`

Note: *when [ID=<id>] and [SN=<sn>] are not specified, the first ST-LINK with ID=0 will be selected.*

Selection of ST-LINK by ID or SN should be used with:

- V1J13S0 or greater ST-LINK firmware version
- V2J21S4 or greater ST-LINK/V2 firmware version
- V2J21M5 or greater ST-LINK/V2-1 firmware version

[UR] available only with ST-LINK/V2 and in SWD mode.

[LPM] mode will be disabled, when the user disconnects from the target.

For JTAG mode, connect under reset has been available since ST-LINK firmware Version V2J15Sx.

The RESET pin of the JTAG connector (pin 15) should be connected to the device reset pin.

[HOTPLUG] available in SWD mode.

For JTAG mode, HotPlug Connect has been available since ST-LINK firmware Version V2J15Sx.

-List

Description: List the corresponding firmware version and the unique Serial Number (SN) of every ST-LINK probe connected to the computer.

Note: To have a correct SN, the ST-LINK firmware version should be:

- V1J13S0 or greater for ST-LINK.
- V2J21S4 or greater for ST-LINK/V2.
- V2J21M5 or greater for ST-LINK/V2-1.

When an ST-LINK/v2 or ST-LINK/V2-1 probe is used with another application, the serial number will not be displayed and the probe can't be used in the current instance of ST-LINK Utility.

-Q

Description: Enable quiet mode. No progress bar displayed.

-w8

Description: Writes 8-bit data to the specified memory address.

Syntax: -w8 <Address> <data>

Example: -w8 0x20000000 0xAA

Note: -w8 supports writing to Flash memory, OTP, SRAM and R/W registers.

-w32

Description: Writes 32-bit data to the specified memory address.

Syntax: -w32 <Address> <data>

Example: -w32 0x08000000 0xAABBCCDD

Note: -w32 supports writing to Flash memory, OTP, SRAM and R/W registers.

-r8

Description: Reads <NumBytes> memory.

Syntax: -r8 <Address> <NumBytes>

Example: -r8 0x20000000 0x100

4.1.2 Core commands

-Rst

Description: Resets the system.

Syntax: -Rst

-HardRst

Description:Hardware reset.

Syntax: -HardRst

Note: -HardRst command is available only with ST-LINK/V2. The RESET pin of the JTAG connector (pin 15) should be connected to the device reset pin.

-Run

Description: Sets the Program Counter and Stack pointer as defined at user application and performs a run operation. This is useful if the user application is loaded with an offset (e.g. 0x08003000). If the address is not specified, 0x08000000 is used.

Syntax: -Run [<Address>]

Example: -run 0x08003000

-Halt

Description: Halts the core.

Syntax: -Halt

-Step

Description: Executes Step core instruction.

Syntax: -Step

-SetBP

Description: Sets the software or hardware breakpoint at a specific address. If an address is not specified, 0x08000000 is used.

Syntax: -SetBP [<Address>]

Example: -SetBP 0x08003000

-ClrBP

Description: Clears all hardware breakpoints, if any.

Syntax: -ClrBP

-CoreReg

Description: Reads the Core registers.

Syntax: -CoreReg

-SCore

Description: Detects the Core status.

Syntax: -SCore

4.1.3 Flash commands**-ME**

Description: Executes a Full chip erase operation.

Syntax: -ME

-SE

Description: Erase Flash sector(s).

Syntax: -SE <Start_Sector> [<End_Sector>]

Example: -SE 0 => Erase sector 0

-SE 2 12 => Erase sectors from 2 to 12

*For STM32L series, the following cmd erases data eeprom:

-SE ed1 => Erases data eeprom at 0x08080000

-SE ed2 => Erases data eeprom at 0x08081800

-P

Description: Load binary, Intel Hex or Motorola S-record file into device memory without verification. For hex and srec format, the address is relevant.

Syntax: -P <File_Path> [<Address>]

Examples: -P C:\file.srec

-P C:\file.bin 0x08002000

-P C:\file.hex

Note: *STM32 F2 and STM32 F4 series support different programming modes depending on the MCU supply voltage. When using ST-LINK/V2, the supply voltage is detected automatically. Therefore, the correct programming mode is selected. When using ST-LINK, the 32-bit programming mode is selected by default.*

If the device is read-protected, the protection will be disabled. If some Flash memory pages are write-protected, the protection will be disabled during programming and then recovered.

-V

Description: Verifies that the programming operation was performed successfully.

Syntax: -V [while_programming/after_programming]

Example: -P *C:\file.srec* -V "after_programming"

Note: *If no argument is provided the while_programming verification method will be performed.*

-CmpFile

Description: Compares a binary, Intel Hex or Motorola S-record file with device memory and displays the address of the 1st different value.

Syntax: `-CmpFile <File_Path> [<Address>]`

Example1: `-CmpFile "c:\application.bin" 0x08000000`

Example2: `-CmpFile "c:\application.hex"`

You can also compare the file content with an external memory. The path of the external memory loader should be specified by the `-EL` cmd.

Example1: `-CmpFile "c:\application.bin" 0x64000000 -EL "c:\Custom-Flash-Loader.stldr"`

4.1.4 Option byte commands**-rOB**

Description: Displays all option bytes.

Syntax: `-rOB`

-OB

Description: Configures the option bytes. This command:

- sets the Read Protection Level to Level 0 (no protection)
- sets the IWDG_SW option to '1' (watchdog enabled by software)
- sets the nRST_STOP option to '0' (reset generated when entering Standby mode)
- sets the Data0 option byte
- sets the Data1 option byte

Syntax: `-OB [RDP=<Level>] [BOR_LEV=<Level>] [IWDG_SW=<Value>]
[nRST_STOP=<Value>] [nRST_STDBY=<Value>] [nBFB2=<Value>]
[nBoot1=<Value>] [nSRAM_Parity=<Value>] [Data0=<Value>]
[SPRMOD=<Value>] [Data1=<Value>] [WRP=<Value>] [WRP2=<Value>]
[WRP3=<Value>] [WRP4=<Value>]
[BOOT_ADD0=<Value>]
[BOOT_ADD1=<Value>]`

Example: `-OB RDP=0 IWDG_SW=1 nRST_STOP=0
Data0=0xAA Data1=0xBC`

Option byte command parameter descriptions

RDP=<Level>:

RDP=<Level> sets the Flash memory read protection level.

The <Level> could be one of the following levels:

- 0: Protection disabled
- 1: Protection enabled
- 2: Protection enabled (debug and boot in SRAM features are DISABLED)

Note: Level 2 is available on STM32 F0, STM32 F2, STM32 F3, STM32 F4 and STM32 L1 series only.

BOR_LEV=<Level>:

BOR_LEV sets the Brownout Reset threshold level.

For STM32 L1 series:

- 0: BOR OFF, 1.45 to 1.55 V voltage range
- 1: 1.69 to 1.8 V voltage range
- 2: 1.94 to 2.1 V voltage range
- 3: 2.3 to 2.49 V voltage range
- 4: 2.54 to 2.74 V voltage range
- 5: 2.77 to 3.0 V voltage range

For STM32 F2 and STM32 F4 series:

- 0: BOR OFF, 1.8 to 2.10 V voltage range
- 1: 2.10 to 2.40 V voltage range
- 2: 2.40 to 2.70 V voltage range
- 3: 2.70 to 3.60 V voltage range

IWDG_SW=<Value>:

The <Value> should be 0 or 1:

- 0: Hardware-independent watchdog
- 1: Software-independent watchdog

nRST_STOP=<Value>:

The <Value> should be 0 or 1:

- 0: Reset generated when CPU enters the Stop mode
- 1: No reset generated.

nRST_STDBY=<Value>:

The <Value> should be 0 or 1:

- 0: Reset generated when CPU enters the Standby mode
- 1: No reset generated.

nBFB2=<Value>:

The <Value> should be 0 or 1:

- 0: Boot from Flash bank 2 when boot pins are set in boot from user Flash position (default)
- 1: Boot from Flash bank 1 when boot pins are set in boot from user Flash position (default).

Note: nBFB2 is available only on devices containing two Flash banks.

nBoot0_SW_Cfg=<Value>:

Only for STM32F04x

The <Value> should be 0 or 1:

- 0 : It allows user to disable BOOT0 hardware pin completely and use User Option bit 11 (nBoot0).
- 1 : The BOOT0 pin is bonded to GPIO pin (PB8 on LQFP32 and smaller packages, PF11 for QFN32 and bigger packages).

nBoot0=<Value>:

Only for STM32F04x and only when nBoot0_SW_Cfg is set.

The <Value> should be 0 or 1

Select the Boot mode together with nBoot1 (See table below)

nBoot1=<Value>:

Only for STM32 F0 and STM32 F3

The <Value> should be 0 or 1:

•STM32F04x:

nBoot1	nBoot0	BOOT0 pin	nBoot0_SW_Cfg	Flash Empty	Boot Mode
X	X	0	1	no	Main Flash memory
X	X	0	1	yes	System memory
0	X	1	1	X	Embedded SRAM
1	X	1	1	X	System memory
X	1	X	0	X	Main Flash memory
0	0	X	0	X	Embedded SRAM
1	0	X	0	X	System memory

•STM32 F0 and STM32 F3:

nBoot1	BOOT0	Boot Mode
X	0	Main Flash memory
0	1	Embedded SRAM
1	1	System memory

nSRAM_Parity=<Value>:

This bit allows the user to enable the SRAM hardware parity check.

The <Value> should be 0 or 1.

Note: nSRAM_Parity is available only on STM32 F0 and STM32 F3.

SDADC12_VDD=<Value>:

It selects the analog monitoring (comparison with Bgap 1.2V voltage) on SDADC12_VDD Power source.

The <Value> should be 0 or 1.

Note: SDADC12_VDD is available only on STM32F37x devices.

Data0=<Value>:

Data0 sets the Data0 option byte.

The <Value> should be in [0..0xFF].

Note: Not available on STM32 F0, STM32 F2, STM32 F3, STM32 F4 and STM32 L1 devices.

Data1=<Value>:

Data1 sets the Data1 option byte.

The <Value> should be in [0..0xFF].

Note: Not available on STM32 F0, STM32 F2, STM32 F3, STM32 F4 and STM32 L1 devices.

SPRMODE=<Value>:

Selection of Protection Mode of WPRi bits:

The <Value> should be 0 or 1.

0: WPRi bits used for Write Protection on sector i (Default).

1: WPRi bits used for PCRoP Protection (read protection) on sector i (Sector)

Note: Available only on devices supporting PCRoP feature.

WRP=<Value>:

WRP enables/disables the write protection of the MCU Flash sectors.

Each bit will enable/disable the write protection of one sector or more depending on the connected device.

For STM32 L1 devices, WRP[i] = 0: Flash sector(s) is protected.

For other devices, WRP[i] = 1: Flash sector(s) is protected.

This command is sufficient to enable/disable all Flash sector protection, except for STM32 L1 medium density plus and High density where WRP2 and WRP3 and WRP4 commands can be mandatory.

For STM32 F4 series, each bit of WRP enables/disables the write protection of one sector.

The <Value> should be in [0..0xFFFFFFFF]

Note: For devices supporting PCROP feature, WRP controls the read protection of the MCU Flash sectors when SPRMOD = 1.

WRP2=<Value>:

WRP2 is available only for STM32 L1 medium density plus, high density and high density plus devices to enable/disable the protection of Flash sectors from page 512 to 1023.

The <Value> should be in [0..0xFFFFFFFF].

Note: For devices supporting PCROP feature, WRP controls the read protection of the MCU Flash sectors when SPRMOD = 1.

WRP3=<Value>:

WRP3 is available only for STM32 L1 high density and high density plus devices to enable/disable the protection of Flash sectors from page 1024 to 1535.

The <Value> should be in [0..0xFFFFFFFF]

WRP4=<Value>:

WRP4 is available only on STM32 L1 high density plus devices to enable/disable the protection of flash sectors from sector 1536 to sector 2047.

The <Value> should be in [0..0xFFFFFFFF]

BOOT_ADD0=<Value>:

Boot Address enable when BOOT0 = 0.

<Value> should be in [0..0xFFFF].

BOOT_ADD0[15:0] corresponds to address [29:14]

BOOT_ADD1=<Value>:

Boot Address enable when BOOT0 = 1.

<Value> should be in [0..0xFFFF].

BOOT_ADD1[15:0] correspond to address [29:14]

DB1M =<Value>:

Dual-Bank on 1 MB Flash:

The <Value> should be 0 or 1.

Note: Available on STM32F42x/STM32F43x 1-MByte devices supporting dual bank swap.

*Note: All parameters listed above should be in hexadecimal format.
For more details, please refer to the Option Bytes section in the Flash programming manual corresponding to your device available at www.st.com*

4.1.5 External memory command

-EL

Description: Selects a Custom Flash memory loader for external memory operations.

Syntax: -EL [<loader_File_Path>]

Example:

```
-P c:\\application.hex -EL c:\\Custom-Flash-Loader.stldr
```

4.1.6 ST-LINK_CLI return codes

In case of error while executing ST-LINK_CLI commands, the return code (Errorlevel) will be greater than 0.

The following table summarizes the ST-LINK_CLI return codes:

Table 1. ST-LINK_CLI return codes

Return code	Commands	Error
1	All	Command arguments error.
2	All	Connection problem.
3	All	Command not available for the connected target.
4	-w8, -w32	Error occurred while writing data to the specified memory address.
5	-r8, r32	Cannot read memory from the specified memory address.
6	-rst, -HardRst	Cannot reset MCU.
7	-Run	Failed to run application.
8	-halt	Failed to halt the core.
9	-STEP	Failed to perform a single instruction step.
10	-SetBP	Failed to set/clear a breakpoint.
11	-ME, -SE	Unable to erase one or more Flash sectors.
12	-P, -V	Flash programming/verification error.
13	-OB	Option bytes programming error.

5 Revision history

Table 2. Document revision history

Date	Revision	Changes
22-Jan-2010	1	Initial release.
12-Feb-2010	2	Changed figures 1, 2, 3, 4, 5, 6 and 7. Added SWD support.
20-May-2010	3	Added support of XL-density devices in Section 2.2.4 and Section 3.5 .
27-Aug-2010	4	Added support of STM32 L1.
03-Feb-2011	5	Hex, srec format support. Command Line Interface support. Changed name and all figures. Added Section 3.7: Automatic mode functions
01-Aug-2011	6	Added ST-LINK/V2 support in Section 1.2: Hardware requirements and support of different programming modes for STM32 series in Section 3.4: Device programming and Section 4.1.3: Flash commands . Added MCU revision ID Display in Section 3.1: Device information .
18-Oct-2011	7	Added support of STM32W and STM32 F4 throughout the document. Added support of “Connect under reset” option in Section 2.2.4: Target menu . Replaced Figure 18: MCU Core panel dialog box . Updated Flash with modifications in Section 3.2: Memory display and modification via GUI commands and in Section 4.1.1: Connection and memory manipulation commands via CLI commands. Added -HardRst command in CLI mode in Section 4.1.2: Core commands . Added WRP2 and WRP3 for STM32 L1 high density devices in Option byte command parameter descriptions .
11-May-2012	8	Added support of STM32 F0. Added Table 1: Applicable tools . Replaced Figure 1 , Figure 13 , Figure 16 , Figure 17 and Figure 19 . Added note for JTAG mode in Section 2.2.4: Target menu . Added nBoot1, VDDA, and nSRAM_Parity commands in Option byte command parameter descriptions . Updated “connect under reset” option in Section 2.2.4: Target menu . Updated -c command and added -Q command in Section 4.1.1: Connection and memory manipulation commands . Added Section 4.1.6: ST-LINK_CLI return codes .

Table 2. Document revision history (continued)

Date	Revision	Changes
05-Oct-2012	9	<p>Added support of STM32F050, STM32 F3, STM32L medium density plus.</p> <p>Added “Compare two files” in Section 2.2.1: File menu and replaced Figure 2.</p> <p>Replaced Figure 5.</p> <p>Added “Reset after programming option” in Section 3.4: Device programming and replaced Figure 15 to Figure 13.</p> <p>Added “SPRMOD” command in Section 4.1.4: Option byte commands.</p> <p>Updated Flash sector protection in Section 3.5: Option bytes configuration and replaced Figure 17.</p> <p>In Section 3.6: MCU core functions, replaced Figure 18.</p> <p>Updated “WRP_x” commands in section Section 4.1.4: Option byte commands.</p> <p>Fixed typos.</p>
11-Jan-2013	10	<p>Updated Section 1.1: System requirements</p> <p>Updated Section 2.1: Main window including Figure 1: STM32 ST-LINK Utility user interface main window (LiveUpdate checkbox and Edit menu)</p> <p>Updated Figure 2</p> <p>Added Section 2.2.2: Edit Menu, including Figure 3: Edit menu</p> <p>Updated Figure 4</p> <p>Updated Section 2.2.4: Target menu including Figure 5</p> <p>Updated Section 2.2.5: ST-LINK menu including Figure 6</p> <p>Updated Figure 11</p> <p>Updated Section 3.2: Memory display and modification including Figure 13</p> <p>Updated Section 4.1: Command line usage (HotPlug)</p> <p>Added “[SPRMOD=<Value>]” in the syntax of “-OB” command, see Section 4.1.4</p> <p>Replaces all occurrences of “BFB2” by “nBFB2”</p>
30-Apr-2013	11	<p>Updated Figure 1: STM32 ST-LINK Utility user interface main window, Figure 2: File menu.</p> <p>Added external memory in Section 2.2.3: View menu.</p> <p>Added printf data in Section 2.2.5: ST-LINK menu.</p> <p>Added Section 2.2.6: External Loader menu.</p> <p>Updated Figure 11: Help menu, Figure 13: STM32 ST-LINK Utility user interface, Figure 15: Open file dialog box, Figure 17: Option Bytes dialog box, Figure 18: MCU Core panel dialog box, and Figure 19: Automatic mode.</p> <p>Added Section 3.8: Developing custom loaders for external memory and Section 3.9: Printf via SWO Viewer.</p> <p>Added -CmpFile in Section 4.1.3: Flash commands.</p> <p>Added Section 4.1.5: External memory command.</p> <p>Updated disclaimer on last page.</p>

Table 2. Document revision history (continued)

Date	Revision	Changes
10-Jul-2013	12	Updated Section 2.2.4: Target menu , “Settings” description. Deleted “Applicable tools” table and updated part number in cover page.
04-Nov-2013	13	Updated Figure 8: External Loader window , Figure 16: Device programming dialog box (programming) and Figure 19: Automatic mode . Updated bullet (4) and added bullet (5) to Section 3.4: Device programming ., and updated bullet (3) in Section 3.7: Automatic mode functions . Updated the following commands: <code>-V, WRP=<Value>;</code> , <code>WRP2=<Value>;</code> and <code>WRP3=<Value>;</code> , and added <code>WRP4=<Value>;</code> .
16-Dec-2013	14	Updated Section 1.3: Installing the STM32 ST-LINK Utility description.
13-Feb-2014	15	Updated Chapter 4.1.4: Option byte commands : Syntax OB, added <code>nSRAM_Parity=<Value>;</code> , <code>nBoot0_SW_Cfg=<Value>;</code> , updated <code>nBoot1=<Value>;</code> ; updated <code>WRP=<Value>;</code> , added <code>WRP4=<Value>;</code> .
16-May-2014	16	Added support for ST32L0 series. Updated Section 2.2.4: Target menu , Section 3.7: Automatic mode functions , Section 4.1.1: Connection and memory manipulation commands and Section 2.2.5: ST-LINK menu .
13-Oct-2014	17	Updated User Configuration option bytes and added Boot address option bytes in Section 3.5: Option bytes configuration . Updated Section 4.1.4: Option byte commands . Updated Figure 17: Option Bytes dialog box .

IMPORTANT NOTICE – PLEASE READ CAREFULLY

STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice. Purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST's terms and conditions of sale in place at the time of order acknowledgement.

Purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of Purchasers' products.

No license, express or implied, to any intellectual property right is granted by ST herein.

Resale of ST products with provisions different from the information set forth herein shall void any warranty granted by ST for such product.

ST and the ST logo are trademarks of ST. All other product or service names are the property of their respective owners.

Information in this document supersedes and replaces information previously supplied in any prior versions of this document.

© 2014 STMicroelectronics – All rights reserved