


ESI 4000

WIRING

ECU connectors function

NO	Function	NO	Function
1	Ground	10	Fault Signal
2	Loading signal	11	Step Motor
3	MAP Sensor Power	12	Step Motor
4	MAP Sensor Signal	13	Step Motor
5	Oxygen Sensor Signal	14	Step Motor
6	Temperature Sensor Signal	15	Fuel Relay Control
7	Ignition Sensor	16	Injector Control
8	Low O ₂ Shutdown	17	Injector Control
9	Ignition Sensor	18	POWER

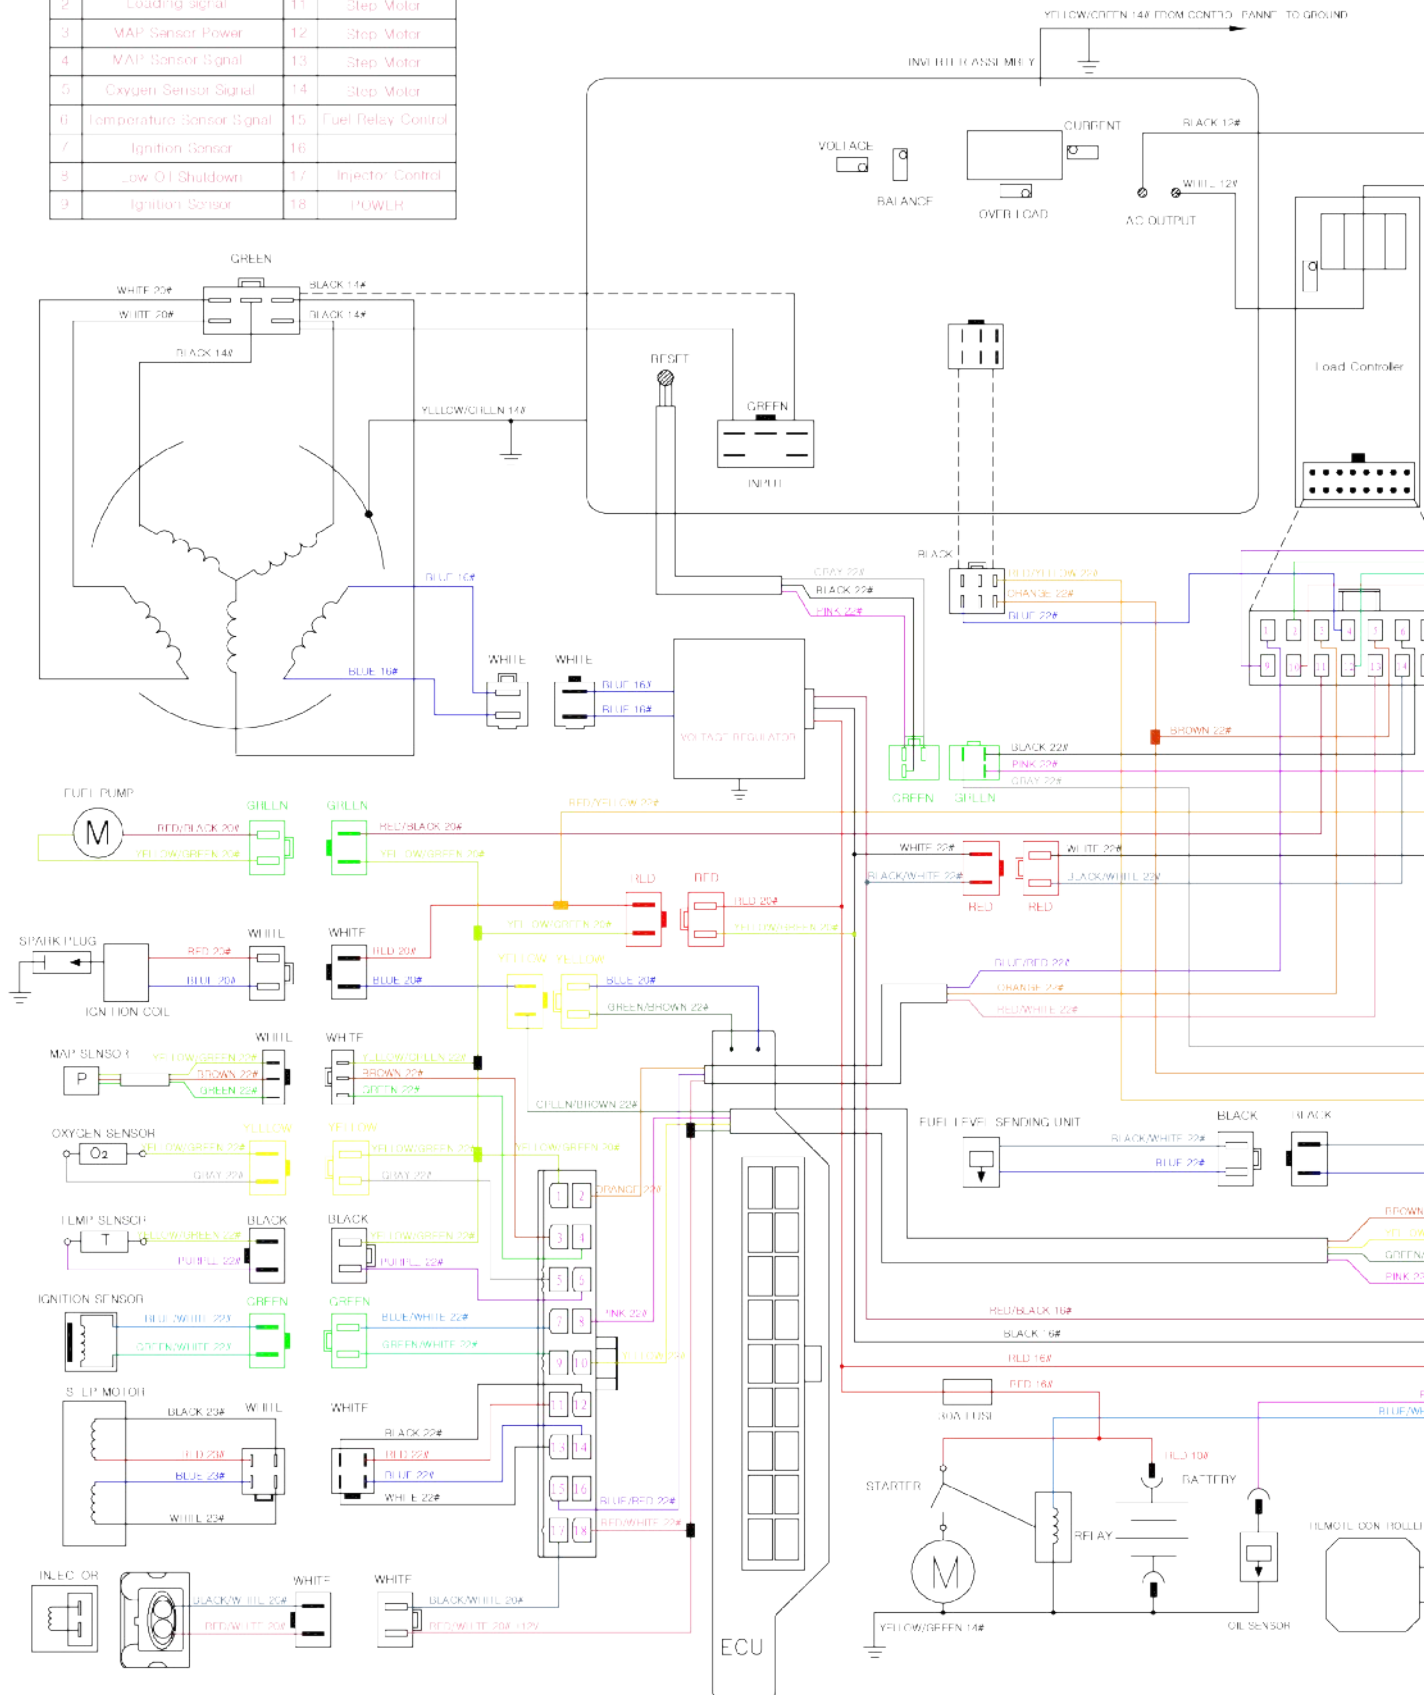

OIER-EFI

DIAGRAM

