
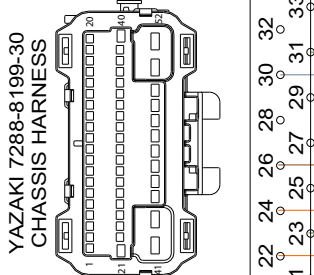
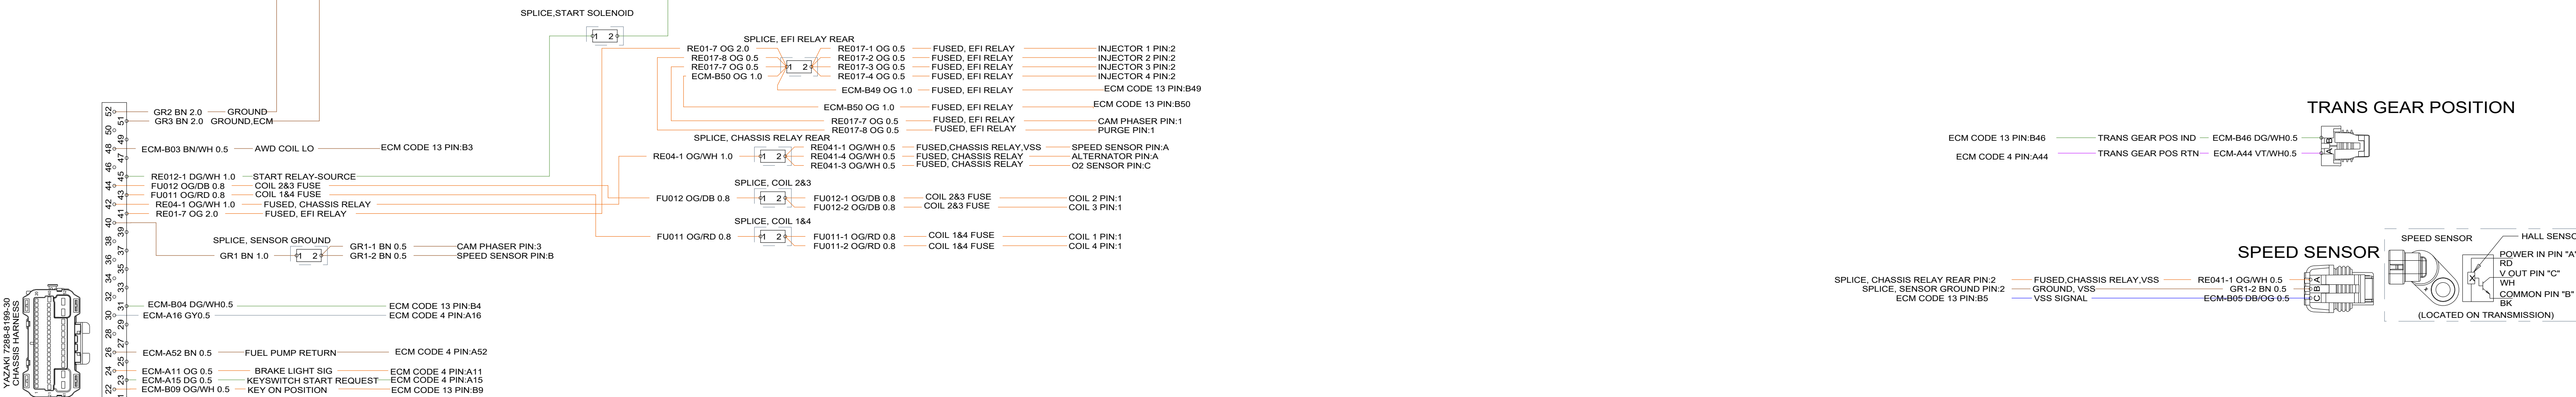


HARNESS-ENGINE

WIRE COLOR LEGEND	
BG	BEIGE (TAN)
BK	BLACK
BL	LIGHT BLUE
DB	DARK BLUE
BN	BROWN
GY	GRAY
GN	LIGHT GREEN
DG	DARK GREEN
OG	ORANGE
PK	PINK
RD	RED
VT	VIOLET (PURPLE)
WH	WHITE
YE	YELLOW
CL	CLEAR

TWO WIRE COLORS ARE SHOWN WITH MAIN TRACE COLORS. EXAMPLE: RD/YE = RED WITH YELLOW TRACE.

E/G ENGINE GROUND
 C/G CHASSIS GROUND
 NC = SWITCH NORMALLY CLOSED
 NO = SWITCH NORMALLY OPEN
 HARNESS: 2416428
 SHEET NO. 1 OF 2

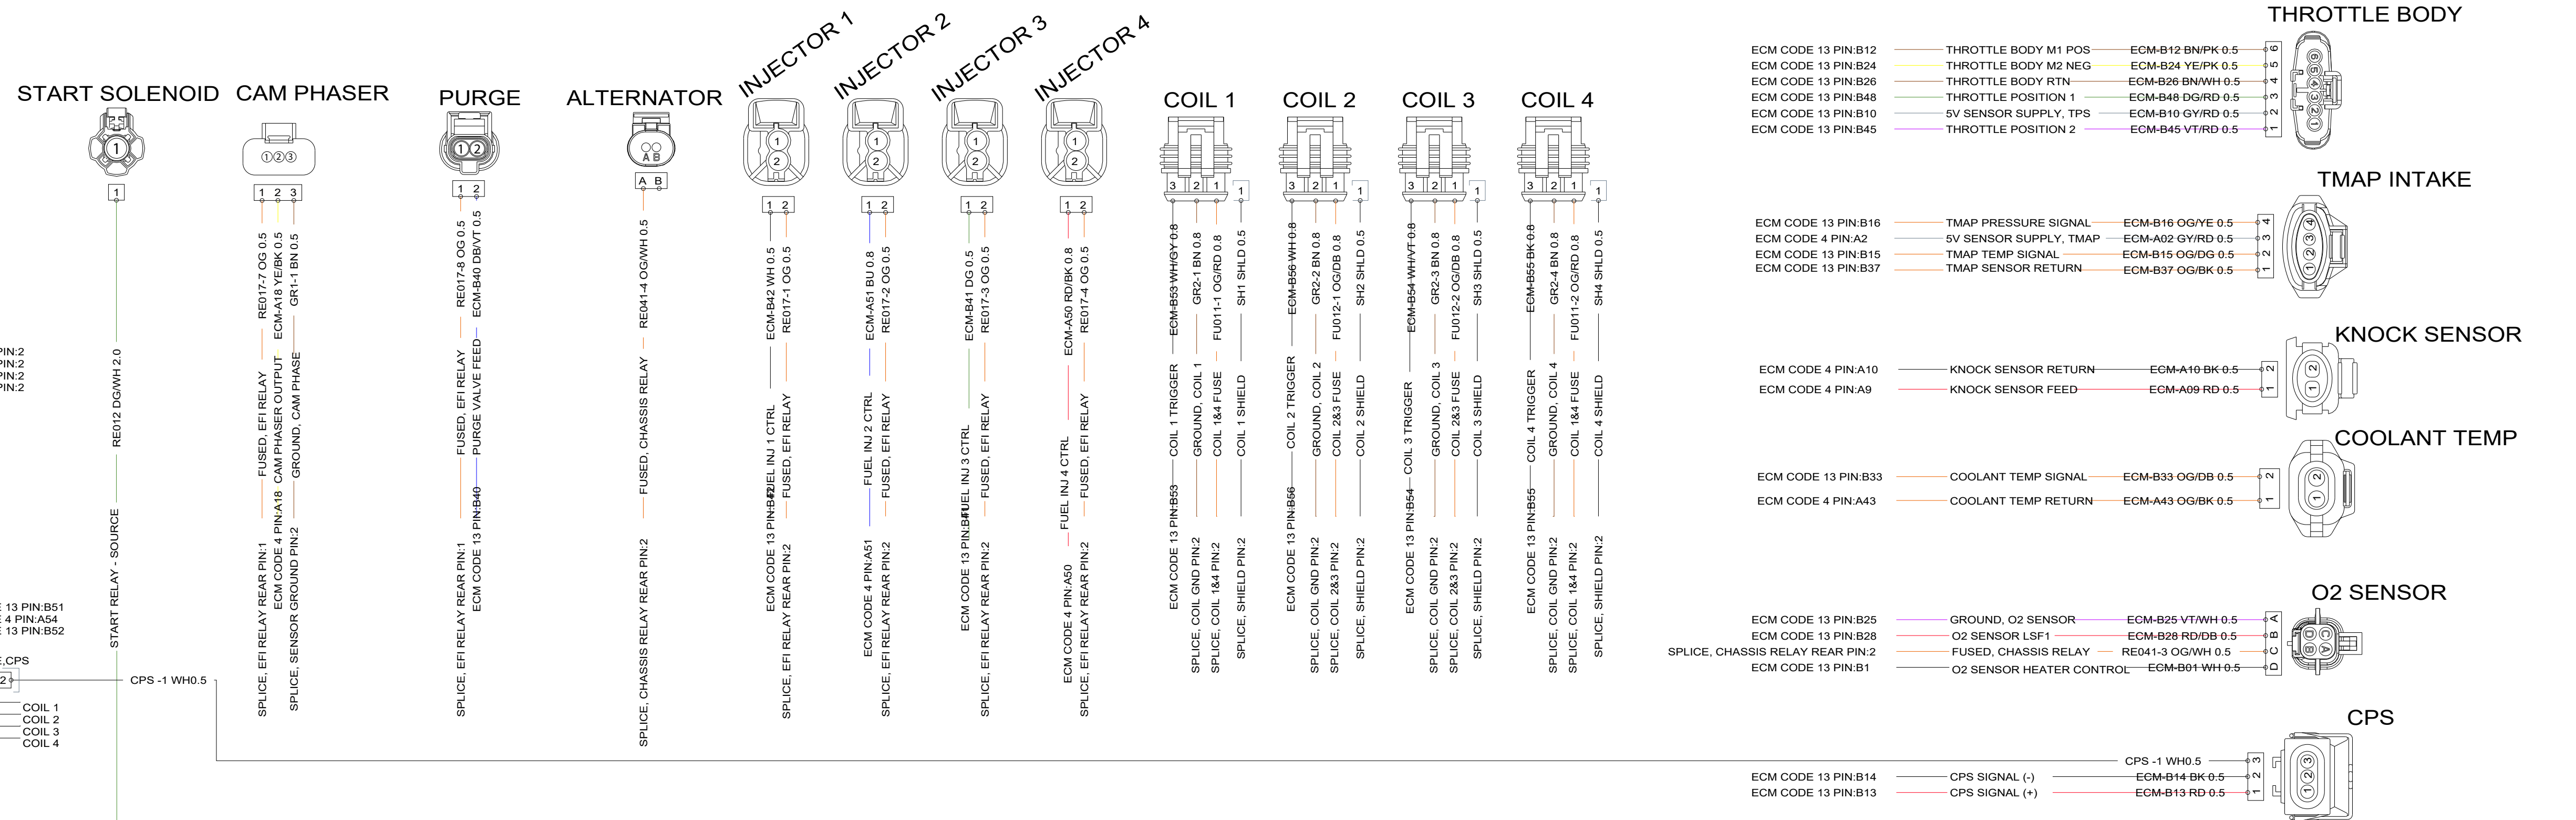



WIRE	FUNCTION	ECM CODE
GR2 BN 2.0	GROUND	
GR3 BN 2.0	GROUND, ECM	
ECM-B03 BN/WH 0.5	AWD COIL LO	ECM CODE 13 PIN B3
RE012-1 DG/WH 1.0	START RELAY-SOURCE	
FU012 OG/DB 0.8	COIL 2&3 FUSE	
FU011 OG/RD 0.8	COIL 1&4 FUSE	
RE04-1 OG/WH 1.0	FUSED, CHASSIS RELAY	
RE01-7 OG 2.0	FUSED, EFI RELAY	
GR1 BN 1.0	SPLICE, SENSOR GROUND	
GR1-1 BN 0.5	CAM PHASER PIN:3	SPEED SENSOR PIN:B
GR1-2 BN 0.5		
ECM-B04 DG/WH 0.5		ECM CODE 13 PIN B4
ECM-A16 GY 0.5		ECM CODE 4 PIN:A16
ECM-A52 BN 0.5	FUEL PUMP RETURN	ECM CODE 4 PIN:A52
ECM-A11 OG 0.5	BRAKE LIGHT SIG	ECM CODE 4 PIN:A11
ECM-A15 DG 0.5	KEYSWITCH START REQUEST	ECM CODE 4 PIN:A15
ECM-B09 OG/WH 0.5	KEY ON POSITION	ECM CODE 13 PIN:B9
ECM-B21 DG/BN 0.5	START RELAY COIL LO	ECM CODE 13 PIN:B21
ECM-A41 DG/RD 0.5	START RELAY COIL HI	ECM CODE 4 PIN:A41
ECM-B07 DG/YE 0.5	LIGHTS RELAY COIL LO	ECM CODE 13 PIN:B7
ECM-B34 OG/BK 0.5	EFI RELAY COIL LO	ECM CODE 13 PIN:B34
ECM-B20 DG/OG 0.5	FUEL RELAY COIL LO	ECM CODE 13 PIN:B20
ECM-B31 OG/YE 0.5	BRAKE SIGNAL-ACTIVE LO	ECM CODE 13 PIN:B31
ECM-A32 BN 0.5	SENSOR GND, DRIVE MODE	ECM CODE 4 PIN:A32
ECM-B47 GY/RD 0.5	DRIVE MODE SELECT	ECM CODE 13 PIN:B47
ECM-B06 OG/BK 0.5	SEATBELT SIGNAL	ECM CODE 13 PIN:B6
ECM-B19 BG/BK 0.5	ENGINE FAN PWM CONTROL	ECM CODE 13 PIN:B19
ECM-B17 GY 0.5	AWD SWITCH REQUEST	ECM CODE 13 PIN:B17
ECM-B36 VT/WH 0.5	FUEL SENSOR FEEDBACK	ECM CODE 13 PIN:B36
ECM-B27 VT/BK 0.5	PEDAL POSITION 2 RETURN	ECM CODE 13 PIN:B27
ECM-B38 VT 0.5	PEDAL POSITION 1 RETURN	ECM CODE 13 PIN:B38
ECM-B35 DB/WH 0.5	PEDAL POSITION 2 SIGNAL	ECM CODE 13 PIN:B35
ECM-B23 OG/RD 0.5	PEDAL POSITION 1 SIGNAL	ECM CODE 13 PIN:B23
ECM-B22 OG/BN 0.5	PEDAL POSITION 1 REF	ECM CODE 13 PIN:B22
ECM-B30 DG 0.5	CAN LOW	ECM CODE 13 PIN:B30
ECM-B29 YE 0.5	CAN HIGH	ECM CODE 13 PIN:B29

ECM CODE 4

WIRE	FUNCTION	ECM CODE
CHASSIS HARNESS PIN:14	SENSOR GND, DRIVE MODE	ECM-A32 BN 0.5
CHASSIS HARNESS PIN:19	START RELAY COIL HI	ECM-A41 DG/RD 0.5
COOLANT TEMP PIN:1	COOLANT TEMP RETURN	ECM-A43 OG/BK 0.5
TRANS GEAR POSITION PIN:A	TRANS GEAR POS RTN	ECM-A44 VT/WH 0.5
INJECTOR 4 PIN:1	FUEL INJ 4 CTRL	ECM-A50 RD/BK 0.8
INJECTOR 2 PIN:1	FUEL INJ 2 CTRL	ECM-A51 BU 0.8
CHASSIS HARNESS PIN:26	FUEL PUMP RETURN	ECM-A52 BN 0.5
SPLICE, ECM GROUND PIN:2	GROUND, ECM	ECM-A54 BN 0.8

ECM CODE 13

WIRE	FUNCTION	ECM CODE
ECM-A02 GY/RD 0.5	5V SENSOR SUPPLY, TMAP	TMAP INTAKE PIN:3
ECM-A09 RD 0.5	KNOCK SENSOR FEED	KNOCK SENSOR PIN:1
ECM-A10 BK 0.5	KNOCK SENSOR RETURN	KNOCK SENSOR PIN:2
ECM-A11 OG 0.5	BRAKE LIGHT SIG	CHASSIS HARNESS PIN:24
ECM-A15 DG 0.5	KEYSWITCH START REQUEST	CHASSIS HARNESS PIN:23
ECM-A16 GY 0.5		CHASSIS HARNESS PIN:30
ECM-A18 YE/BK 0.5	CAM PHASER OUTPUT	CAM PHASER PIN:2
CHASSIS HARNESS PIN:1	CAN HIGH	ECM-B29 YE 0.5
CHASSIS HARNESS PIN:2	CAN LOW	ECM-B30 DG 0.5
CHASSIS HARNESS PIN:15	BRAKE SIGNAL-ACTIVE LO	ECM-B31 OG/YE 0.5
CHASSIS HARNESS PIN:6	PEDAL POSITION 2 SIGNAL	ECM-B32 DB/BK 0.5
COOLANT TEMP PIN:2	COOLANT TEMP SIGNAL	ECM-B33 OG/DB 0.5
CHASSIS HARNESS PIN:17	EFI RELAY COIL LO	ECM-B34 DG/BK 0.5
CHASSIS HARNESS PIN:5	PEDAL POSITION 1 SIGNAL	ECM-B35 DB/WH 0.5
CHASSIS HARNESS PIN:9	FUEL SENSOR FEEDBACK	ECM-B36 VT/WH 0.5
TMAP INTAKE PIN:1	TMAP SENSOR RETURN	ECM-B37 OG/BK 0.5
CHASSIS HARNESS PIN:7	PEDAL POSITION 1 RETURN	ECM-B38 VT 0.5
PURGE PIN:2	PURGE VALVE FEED	ECM-B40 DB/VT 0.5
INJECTOR 3 PIN:1	FUEL INJ 3 CTRL	ECM-B41 DG 0.5
INJECTOR 1 PIN:1	FUEL INJ 1 CTRL	ECM-B42 WH 0.5
THROTTLE BODY PIN:1	THROTTLE POSITION 2	ECM-B45 VT/RD 0.5
TRANS GEAR POSITION PIN:B	TRANS GEAR POS IND	ECM-B46 DG/WH 0.5
CHASSIS HARNESS PIN:13	DRIVE MODE SELECT	ECM-B47 GY/RD 0.5
THROTTLE BODY PIN:3	THROTTLE POSITION 1	ECM-B48 DG/RD 0.5
SPLICE, EFI RELAY REAR PIN:1	FUSED, EFI RELAY	ECM-B49 OG 1.0
SPLICE, ECM GROUND PIN:2	GROUND, ECM	ECM-B50 OG 1.0
SPLICE, ECM GROUND PIN:2	GROUND, ECM	ECM-B52 BN 1.0
COIL 1 PIN:3	COIL 1 TRIGGER	ECM-B53 WH/GY 0.8
COIL 3 PIN:3	COIL 3 TRIGGER	ECM-B54 WH/VT 0.8
COIL 4 PIN:3	COIL 4 TRIGGER	ECM-B55 BK 0.8
COIL 2 PIN:3	COIL 2 TRIGGER	ECM-B56 WH 0.8
ECM-B01 WH 0.5	O2 SENSOR HEATER CONTROL	O2 SENSOR PIN:D
ECM-B03 BN/WH 0.5	AWD COIL LO	CHASSIS HARNESS PIN:48
ECM-B04 DG/WH		
ECM-B05 DB/OG 0.5	VSS SIGNAL	SPEED SENSOR PIN:C
ECM-B06 OG/BK 0.5	SEATBELT SIGNAL	CHASSIS HARNESS PIN:12
ECM-B07 DG/YE 0.5	LIGHTS RELAY COIL LO	CHASSIS HARNESS PIN:18
ECM-B09 OG/WH 0.5	KEY ON POSITION	CHASSIS HARNESS PIN:22
ECM-B10 GY/RD 0.5	5V SENSOR SUPPLY, TPS	THROTTLE BODY PIN:2
ECM-B12 BN/PK 0.5	THROTTLE BODY M1 POS	THROTTLE BODY PIN:6
ECM-B13 RD 0.5	CPS SIGNAL (+)	CPS PIN:1
ECM-B14 BK 0.5	CPS SIGNAL (-)	CPS PIN:2
ECM-B15 OG/DG 0.5	TMAP TEMP SIGNAL	TMAP INTAKE PIN:2
ECM-B16 OG/YE 0.5	TMAP PRESSURE SIGNAL	TMAP INTAKE PIN:4
ECM-B17 GY 0.5	AWD SWITCH REQUEST	CHASSIS HARNESS PIN:10
ECM-B19 BG/BK 0.5	ENGINE FAN PWM CONTROL	CHASSIS HARNESS PIN:11
ECM-B20 DG/OG 0.5	FUEL RELAY COIL LO	CHASSIS HARNESS PIN:16
ECM-B21 DG/BN 0.5	START RELAY COIL LO	CHASSIS HARNESS PIN:20
ECM-B22 OG/BN 0.5	PEDAL POSITION 1 REF	CHASSIS HARNESS PIN:3
ECM-B23 OG/RD 0.5	PEDAL POSITION 2 REF	CHASSIS HARNESS PIN:4
ECM-B24 YE/PK 0.5	THROTTLE BODY M2 NEG	THROTTLE BODY PIN:5
ECM-B25 VT/WH 0.5	GROUND, O2 SENSOR	O2 SENSOR PIN:A
ECM-B26 BN/WH 0.5	THROTTLE BODY RTN	THROTTLE BODY PIN:4
ECM-B27 VT/BK 0.5	PEDAL POSITION 2 RETURN	CHASSIS HARNESS PIN:8
ECM-B28 RD/DB 0.5	O2 SENSOR LSF1	O2 SENSOR PIN:B

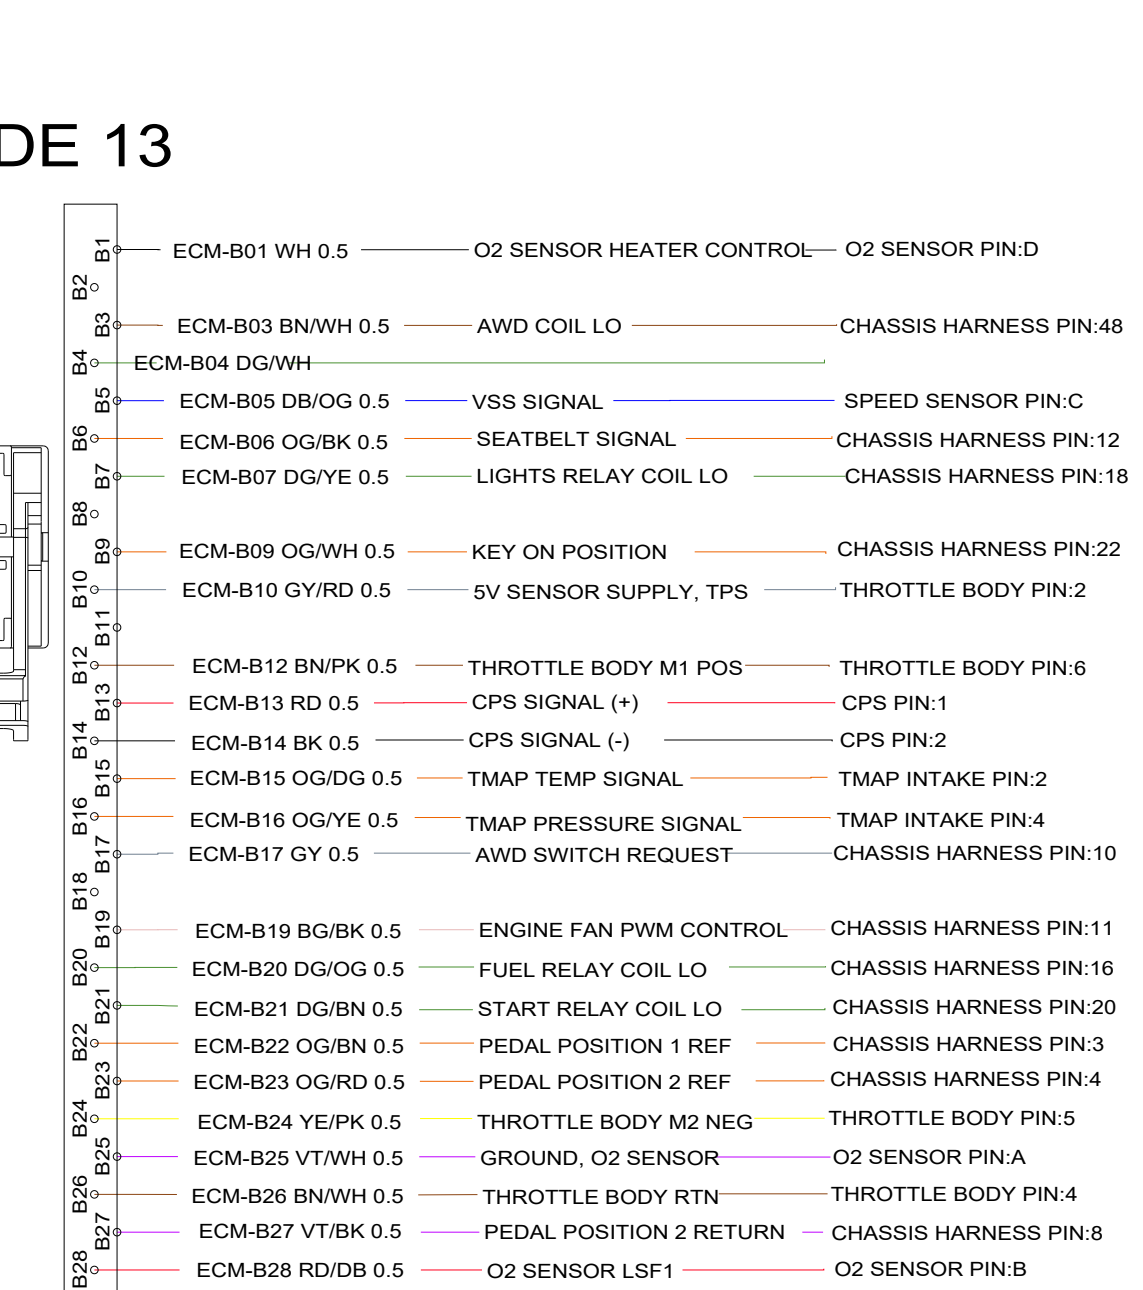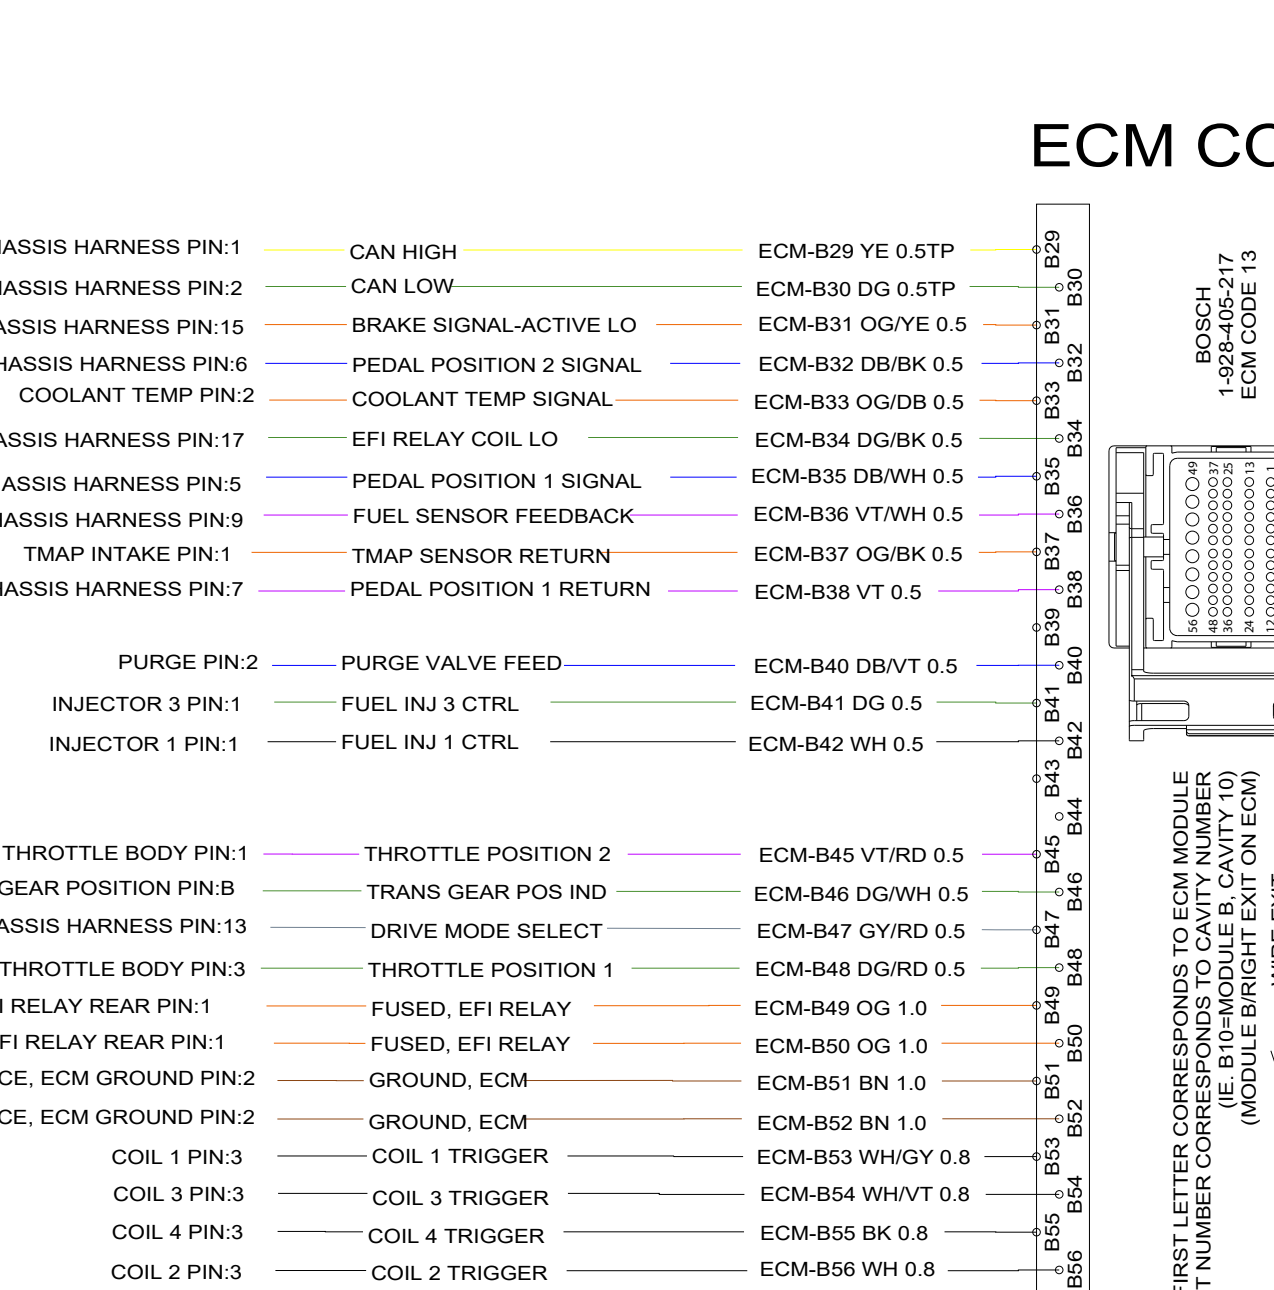

HARNESS-ENGINE

WIRE COLOR LEGEND	
BG	BEIGE (TAN)
BK	BLACK
BL	LIGHT BLUE
DB	DARK BLUE
BN	BROWN
GY	GRAY
GN	LIGHT GREEN
DG	DARK GREEN
OG	ORANGE
PK	PINK
RD	RED
VT	VIOLET (PURPLE)
WH	WHITE
YE	YELLOW
CL	CLEAR

TWO WIRE COLORS ARE SHOWN WITH MAIN TRACE COLORS. EXAMPLE: RD/YE = RED WITH YELLOW TRACE.

ENGINE GROUND
CHASSIS GROUND
NC = SWITCH NORMALLY CLOSED
NO = SWITCH NORMALLY OPEN
HARNESS: 2416428
SHEET NO. 2 OF 2

SCHEMATIC CABLE/WIRE TERMINATION TABLE										
CCT #	TYPE	GAUGE	COLOR	FROM COMPONENT	FROM PORT	TO COMPONENT	TO PORT	FUNCTION	INDEX	
CPS-1	TXL	0.5	WH	CPS	3	SPLICE, CPS	2	CPS	1	
ECM-A11	TXL	0.5	OG	ECM CODE 4	A11	CHASSIS HARNESS	24	BRAKE LIGHT SIG	2	
ECM-A16	TXL	0.5	GY	CHASSIS HARNESS	30	ECM CODE 4	A16	TBD	3	
ECM-A32	TXL	0.5	BN	CHASSIS HARNESS	14	ECM CODE 4	A32	SENSOR GND, DRIVE MODE	4	
ECM-A44	TXL	0.5	VT/WH	TRANS GEAR POSITION	A	ECM CODE 4	A44	TRANS GEAR POS RTN	5	
ECM-A52	TXL	0.5	BN	CHASSIS HARNESS	26	ECM CODE 4	A52	FUEL PUMP RETURN	6	
ECM-B04	TXL	0.5	DG/WH	CHASSIS HARNESS	31	ECM CODE 13	B4	TBD	7	
ECM-B46	TXL	0.5	DG/WH	TRANS GEAR POSITION	B	ECM CODE 13	B46	TRANS GEAR POS IND	8	
ECM-B47	TXL	0.5	GY/RD	ECM CODE 13	B47	CHASSIS HARNESS	13	DRIVE MODE SELECT	9	
RE012-1	TXL	1.0	DG/WH	SPLICE, START SOLENOID	1	CHASSIS HARNESS	45	START RELAY-SOURCE	10	
ECM-A02	TXL	0.5	GY/RD	TMAP INTAKE	3	ECM CODE 4	A2	SV SENSOR SUPPLY, TMAP	11	
ECM-A09	TXL	0.5	RD	KNOCK SENSOR	1	ECM CODE 4	A9	KNOCK SENSOR FEED	12	
ECM-A10	TXL	0.5	BK	KNOCK SENSOR	2	ECM CODE 4	A10	KNOCK SENSOR RETURN	13	
ECM-A15	TXL	0.5	DG	CHASSIS HARNESS	23	ECM CODE 4	A15	KEYSWITCH START REQUEST	14	
ECM-A18	TXL	0.5	YE/BK	CAM PHASER	2	ECM CODE 4	A18	CAM PHASER OUTPUT	15	
ECM-A41	TXL	0.5	DG/RD	CHASSIS HARNESS	19	ECM CODE 4	A41	START RELAY COIL HI	16	
ECM-A43	TXL	0.5	OG/BK	COOLANT TEMP	1	ECM CODE 4	A43	COOLANT TEMP RETURN	17	
ECM-A50	TXL	0.8	RD/BK	INJECTOR 4	1	ECM CODE 4	A50	FUEL INJ 4 CTRL	18	
ECM-A51	TXL	0.8	BU	INJECTOR 2	1	ECM CODE 4	A51	FUEL INJ 2 CTRL	19	
ECM-A54	TXL	0.8	BN	SPLICE, ECM GROUND	2	ECM CODE 4	A54	GROUND, ECM	20	
ECM-B01	TXL	0.5	WH	O2 SENSOR	D	ECM CODE 13	B1	O2 SENSOR HEATER CONTROL	21	
ECM-B03	TXL	0.5	BN/WH	CHASSIS HARNESS	48	ECM CODE 13	B3	AWD COIL LO	22	
ECM-B05	TXL	0.5	DB/OG	SPEED SENSOR	C	ECM CODE 13	B5	VSS SIGNAL	23	
ECM-B06	TXL	0.5	OG/BK	CHASSIS HARNESS	12	ECM CODE 13	B6	SEATBELT SIGNAL	24	
ECM-B07	TXL	0.5	DG/YE	CHASSIS HARNESS	18	ECM CODE 13	B7	LIGHTS RELAY COIL LO	25	
ECM-B09	TXL	0.5	OG/WH	CHASSIS HARNESS	22	ECM CODE 13	B9	KEY ON POSITION	26	
ECM-B10	TXL	0.5	GY/RD	ECM CODE 13	B10	THROTTLE BODY	2	SV SENSOR SUPPLY, TPS	27	
ECM-B12	TXL	0.5	BN/PK	THROTTLE BODY	6	ECM CODE 13	B12	THROTTLE BODY M1 POS	28	
ECM-B15	TXL	0.5	OG/DG	TMAP INTAKE	2	ECM CODE 13	B15	TMAP TEMP SIGNAL	29	
ECM-B16	TXL	0.5	OG/YE	TMAP INTAKE	4	ECM CODE 13	B16	TMAP PRESSURE SIGNAL	30	
ECM-B17	TXL	0.5	GY	CHASSIS HARNESS	10	ECM CODE 13	B17	AWD SWITCH REQUEST	31	
ECM-B19	TXL	0.5	BG/BK	CHASSIS HARNESS	11	ECM CODE 13	B19	ENGINE FAN PWM CONTROL	32	
ECM-B20	TXL	0.5	DG/OG	CHASSIS HARNESS	16	ECM CODE 13	B20	FUEL RELAY COIL LO	33	
ECM-B21	TXL	0.5	DG/BN	CHASSIS HARNESS	20	ECM CODE 13	B21	START RELAY COIL LO	34	
ECM-B22	TXL	0.5	OG/BN	CHASSIS HARNESS	3	ECM CODE 13	B22	PEDAL POSITION 1 REF	35	
ECM-B23	TXL	0.5	OG/RD	CHASSIS HARNESS	4	ECM CODE 13	B23	PEDAL POSITION 2 REF	36	
ECM-B24	TXL	0.5	YE/PK	THROTTLE BODY	5	ECM CODE 13	B24	THROTTLE BODY M2 NEG	37	
ECM-B25	TXL	0.5	VT/WH	O2 SENSOR	A	ECM CODE 13	B25	GROUND, O2 SENSOR	38	
ECM-B26	TXL	0.5	BN/WH	THROTTLE BODY	4	ECM CODE 13	B26	THROTTLE BODY RTN	39	
ECM-B27	TXL	0.5	VT/BK	CHASSIS HARNESS	8	ECM CODE 13	B27	PEDAL POSITION 2 RETURN	40	
ECM-B28	TXL	0.5	RD/DB	O2 SENSOR	B	ECM CODE 13	B28	O2 SENSOR LSF1	41	
ECM-B31	TXL	0.5	OG/YE	CHASSIS HARNESS	15	ECM CODE 13	B31	BRAKE SIGNAL-ACTIVE LO	42	
ECM-B32	TXL	0.5	DB/BK	CHASSIS HARNESS	6	ECM CODE 13	B32	PEDAL POSITION 2 SIGNAL	43	
ECM-B33	TXL	0.5	OG/DB	COOLANT TEMP	2	ECM CODE 13	B33	COOLANT TEMP SIGNAL	44	
ECM-B34	TXL	0.5	DG/BK	CHASSIS HARNESS	17	ECM CODE 13	B34	EFI RELAY COIL LO	45	
ECM-B35	TXL	0.5	DB/WH	CHASSIS HARNESS	5	ECM CODE 13	B35	PEDAL POSITION 1 SIGNAL	46	
ECM-B36	TXL	0.5	VT/WH	CHASSIS HARNESS	9	ECM CODE 13	B36	FUEL SENSOR FEEDBACK	47	
ECM-B37	TXL	0.5	OG/BK	TMAP INTAKE	1	ECM CODE 13	B37	TMAP SENSOR RETURN	48	
ECM-B38	TXL	0.5	VT	CHASSIS HARNESS	7	ECM CODE 13	B38	PEDAL POSITION 1 RETURN	49	
ECM-B40	TXL	0.5	DB/VT	PURGE	2	ECM CODE 13	B40	PURGE VALVE FEED	50	
ECM-B41	TFE	0.5	DG	INJECTOR 3	1	ECM CODE 13	B41	FUEL INJ 3 CTRL	51	
ECM-B42	TFE	0.5	WH	INJECTOR 1	1	ECM CODE 13	B42	FUEL INJ 1 CTRL	52	
ECM-B45	TXL	0.5	VT/RD	THROTTLE BODY	1	ECM CODE 13	B45	THROTTLE POSITION 2	53	
ECM-B48	TXL	0.5	DG/RD	THROTTLE BODY	3	ECM CODE 13	B48	THROTTLE POSITION 1	54	
ECM-B49	TXL	1.0	OG	SPLICE, EFI RELAY REAR	1	ECM CODE 13	B49	FUSED, EFI RELAY	55	
ECM-B50	TXL	1.0	OG	SPLICE, EFI RELAY REAR	1	ECM CODE 13	B50	FUSED, EFI RELAY	56	
ECM-B51	TXL	1.0	BN	SPLICE, ECM GROUND	2	ECM CODE 13	B51	GROUND, ECM	57	
ECM-B52	TXL	1.0	BN	SPLICE, ECM GROUND	2	ECM CODE 13	B52	GROUND, ECM	58	
FU011	TXL	0.8	OG/RD	CHASSIS HARNESS	43	SPLICE, COIL 1&4	1	COIL 1&4 FUSE	59	
FU012	TXL	0.8	OG/DB	CHASSIS HARNESS	44	SPLICE, COIL 2&3	1	COIL 2&3 FUSE	60	
GR1	TXL	1.0	BN	CHASSIS HARNESS	40	SPLICE, SENSOR GROUND	1	GROUND	61	
GR1-1	TXL	0.5	BN	SPLICE, SENSOR GROUND	2	CAM PHASER	3	GROUND, CAM PHASE	62	
GR1-2	TXL	0.5	BN	SPLICE, SENSOR GROUND	2	SPEED SENSOR	B	GROUND, VSS	63	
GR2	TXL	2.0	BN	CHASSIS HARNESS	52	SPLICE, COIL GND	1	GROUND	64	
GR3	TXL	2.0	BN	CHASSIS HARNESS	51	SPLICE, ECM GROUND	1	GROUND, ECM	65	
GR4	TXL	1.0	BN	SPLICE, ECM GROUND	2	SPLICE, SHIELD	1	GROUND	66	
RE01-7	TXL	2.0	OG	CHASSIS HARNESS	41	SPLICE, EFI RELAY REAR	1	FUSED, EFI RELAY	67	
RE04-1	TXL	1.0	OG/WH	CHASSIS HARNESS	42	SPLICE, CHASSIS RELAY REAR	1	FUSED, CHASSIS RELAY	68	
RE012	TXL	2.0	DG/WH	SPLICE, START SOLENOID	2	START RELAY	1	START RELAY - SOURCE	69	
RE017-1	TFE	0.5	OG	SPLICE, EFI RELAY REAR	2	INJECTOR 1	2	FUSED, EFI RELAY	70	
RE017-2	TFE	0.5	OG	SPLICE, EFI RELAY REAR	2	INJECTOR 2	2	FUSED, EFI RELAY	71	
RE017-3	TFE	0.5	OG	SPLICE, EFI RELAY REAR	2	INJECTOR 3	2	FUSED, EFI RELAY	72	
RE017-4	TFE	0.5	OG	SPLICE, EFI RELAY REAR	2	INJECTOR 4	2	FUSED, EFI RELAY	73	
RE017-7	TXL	0.5	OG	SPLICE, EFI RELAY REAR	1	CAM PHASER	1	FUSED, EFI RELAY	74	
RE017-8	TXL	0.5	OG	SPLICE, EFI RELAY REAR	1	PURGE	1	FUSED, EFI RELAY	75	
RE041-1	TXL	0.5	OG/WH	SPLICE, CHASSIS RELAY REAR	2	SPEED SENSOR	A	FUSED, CHASSIS RELAY, VSS	76	
RE041-3	TXL	0.5	OG/WH	SPLICE, CHASSIS RELAY REAR	2	O2 SENSOR	C	FUSED, CHASSIS RELAY	77	
RE041-4	TXL	0.5	OG/WH	SPLICE, CHASSIS RELAY REAR	2	ALTERNATOR	A	FUSED, CHASSIS RELAY	78	
ECM-B53	TXL	0.8	WH/GY	COIL 1	3	ECM CODE 13	B53	COIL 1 TRIGGER	79	
FU011-1	TXL	0.8	OG/RD	SPLICE, COIL 1&4	2	COIL 1	1	COIL 1&4 FUSE	80	
GR2-1	TXL	0.8	BN	SPLICE, COIL GND	2	COIL 1	2	GROUND, COIL 1	81	
SH1	SHLD	0.5	SHLD	SPLICE, SHIELD	2	FLUSH CUT AT COIL 1	1	COIL 1 SHIELD	82	
ECM-B56	TXL	0.8	WH	COIL 2	3	ECM CODE 13	B56	COIL 2 TRIGGER	83	
FU012-1	TXL	0.8	OG/DB	SPLICE, COIL 2&3	2	COIL 2	1	COIL 2&3 FUSE	84	
GR2-2	TXL	0.8	BN	SPLICE, COIL GND	2	COIL 2	2	GROUND, COIL 2	85	
SH2	SHLD	0.5	SHLD	SPLICE, SHIELD	2	FLUSH CUT AT COIL 2	1	COIL 2 SHIELD	86	
ECM-B54	TXL	0.8	WH/VT	COIL 3	3	ECM CODE 13	B54	COIL 3 TRIGGER	87	
FU012-2	TXL	0.8	OG/DB	SPLICE, COIL 2&3	2	COIL 3	1	COIL 2&3 FUSE	88	
GR2-3	TXL	0.8	BN	SPLICE, COIL GND	2	COIL 3	2	GROUND, COIL 3	89	
SH3	SHLD	0.5	SHLD	SPLICE, SHIELD	2	FLUSH CUT AT COIL 3	1	COIL 3 SHIELD	90	
ECM-B55	TXL	0.8	BK	COIL 4	3	ECM CODE 13	B55	COIL 4 TRIGGER	91	
FU011-2	TXL	0.8	OG/RD	SPLICE, COIL 1&4	2	COIL 4	1	COIL 1&4 FUSE	92	
GR2-4	TXL	0.8	BN	SPLICE, COIL GND	2	COIL 4	2	GROUND, COIL 4	93	
SH4	SHLD	0.5	SHLD	SPLICE, SHIELD	2	FLUSH CUT AT COIL 4	1	COIL 4 SHIELD	94	
CPS SHLD	SHLD	0.5	SHLD	SPLICE, ECM GROUND	2	SPLICE, CPS	1	CPS SHIELD	95	
ECM-B13	TXL	0.5	RD	CPS	1	ECM CODE 13	B13	CPS SIGNAL (+)	96	
ECM-B14	TXL	0.5	BK	CPS	2	ECM CODE 13	B14	CPS SIGNAL (-)	97	
ECM-B29	TXL	0.5TP	YE	CHASSIS HARNESS	1	ECM CODE 13	B29	CAN HIGH	98	
ECM-B30	TXL	0.5TP	DG	CHASSIS HARNESS	2	ECM CODE 13	B30	CAN LOW	99	

04/25/21