

Ignition/Main Harness (p/n 1686-403) Z1

- 1 CONNECTOR, SPEED SWITCH
- 2 CONNECTOR, CCU
- 3 CONNECTOR, DIAGNOSTICS
- 4 CONNECTOR, REVERSE ACTUATOR
- 5 CONNECTOR, ACCESSORY PLUG
- 6 SENSOR, WATER TEMP.
- 7 SENSOR, MANIFOLD TEMP.
- 8 SENSOR, AMBIENT PRESSURE
- 9 SENSOR, MANIFOLD PRESSURE
- 10 SENSOR, THROTTLE POSITION
- 11 SENSOR, OXYGEN
- 12 MOTOR, ISC
- 13 SENSOR, CAM
- 14 SENSOR, CRANKSHAFT
- 15 CONNECTOR, ECU #2
- 16 INJECTOR, #2
- 17 INJECTOR, #1
- 18 COIL, IGNITION #2
- 19 COIL, IGNITION #1
- 20 CONNECTOR, ECU #1
- 21 MODULE, POWER DISTRIBUTION
- 22 CONNECTOR, HARNESS TO BATTERY
- 23 GROUND, CHASSIS
- 24 BATTERY 12 VOLT
- 25 RELAY, STARTER
- 26 SOLENOID
- 27 MOTOR, STARTER
- 28 CONNECTOR, FUEL PUMP/SENDER
- 29 SWITCH, REVERSE GEAR
- 30 REVERSE ALARM
- 31 CONNECTOR, HANDLEBAR
- 32 CONNECTOR, CONSOLE
- 33 SWITCH, OIL PRESSURE
- 34 SWITCH, BRAKE
- 35 CONNECTOR, TAILLIGHT
- 36 STATOR

